# User Guide

INSIGNIA™

32" LCD TV

**NS-L32Q-10A**

INSIGNIA™

# Contents


CHILD SAFETY ..... 1

Important safety instructions ..... 2
- Warnings ..... 2
- Cautions ..... 3

Introduction ..... 4

Installing the stand or wall-mount bracket ..... 4
- Installing the stand ..... 4
- Installing a wall-mount bracket ..... 4

TV components ..... 5
- Accessories ..... 5
- Cleaning cloth ..... 5
- Front ..... 5
- Back ..... 5
- Side ..... 6
- Remote control ..... 6

Using the remote control ..... 7
- Installing the remote control batteries ..... 7
- Aiming the remote control ..... 8
- Using the remote control holder ..... 8
- Programming a universal remote control to work with your TV ..... 8

Making connections ..... 9
- Connecting the power ..... 9
- Connecting an outdoor antenna ..... 9
- Connecting an indoor antenna ..... 9
- Connecting cable TV ..... 9
- Connecting satellite TV via a satellite TV box ..... 10
- Connecting a VCR ..... 10
- Connecting a camcorder or game console ..... 11
- Connecting an HDMI device ..... 11
- Connecting a component video device ..... 12
- Connecting an S-Video device ..... 12
- Connecting a computer ..... 12
- Connecting headphones ..... 12
- Connecting a digital audio amplifier ..... 13
- Connecting an analog audio amplifier ..... 13

Turning on your TV for the first time ..... 13

Understanding the basics ..... 13
- Turning your TV on or off ..... 13
- Selecting the video input source ..... 14
- On-screen menu overview ..... 14
- Navigating the menus ..... 15
- Selecting a channel ..... 15
- Adjusting the volume ..... 15
- Displaying additional information ..... 15

Adjusting the picture . . . . . 15
Adjusting the TV picture . . . . . 15
Adjusting Advanced Video settings . . . . . 16
Freezing the picture . . . . . 16

Adjusting the sound . . . . . 16
Adjusting the sound . . . . . 16
Playing TV audio only . . . . . 17

Changing channel settings . . . . . 17
Automatically scanning for channels . . . . . 17
Hiding channels . . . . . 18
Setting up a favorite channel list . . . . . 19
Viewing a favorite channel . . . . . 19
Adding or changing a channel label . . . . . 19
Checking the DTV signal strength . . . . . 20

Setting parental controls . . . . . 20
Setting or changing the password . . . . . 20
Setting parental control levels . . . . . 21
Blocking unrated TV . . . . . 22
Downloading rating information . . . . . 23
Locking control buttons . . . . . 24

Using closed captioning . . . . . 24
Viewing closed captioning . . . . . 24
Selecting the closed captioning mode . . . . . 24
Customizing DTV closed captioning styles . . . . . 25

Adjusting time settings . . . . . 26
Setting the clock . . . . . 26
Setting the sleep timer . . . . . 26

Adjusting menu settings . . . . . 27
Selecting the menu language . . . . . 27
Changing the menu transparency . . . . . 27
Labeling an input source . . . . . 28
Resetting settings to the defaults . . . . . 28

Programming your remote control . . . . . 29
Troubleshooting remote control programming . . . . . 32
Manufacturers' codes . . . . . 32

Maintaining . . . . . 44
Cleaning the TV cabinet . . . . . 44
Cleaning the TV screen . . . . . 44

Troubleshooting . . . . . 44

Specifications . . . . . 45

Legal notices . . . . . 45

Two-year limited warranty . . . . . 47

# CHILD SAFETY

## It makes a difference how and where you use your flat panel display

### As you enjoy your new product, keep these safety tips in mind

## *The issue*

The home theater entertainment experience is a growing trend, and larger TVs are popular purchases. However, TVs are not always supported on the proper stands or installed according to the manufacturer's recommendations. We and the consumer electronics industry are committed to making home entertainment enjoyable and safe.

TVs that are inappropriately placed on dressers, bookcases, shelves, desks, speakers, chests, or carts may fall over and cause injury.

## *Tune into safety*

- One size of TV stand does **not** fit all. Use only a TV stand rated for the weight of your TV.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't let children climb on or play with entertainment system furniture and TVs.
- Don't place TVs on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger-than-life" TV. Make sure that you place or install the TV where it cannot be pushed, pulled over, or knocked down.
- Make sure that you route all cords and cables so that they cannot be pulled or grabbed by curious children.

## *Wall mounting*

If you decide to wall mount your TV, always remember:

- One size of wall mount does **not** fit all. Use only a wall mount rated for the weight of your TV and that has been recommended by this TV manufacturer, listed in this manual, or otherwise listed by an independent laboratory as suitable for your TV.
- Follow all instructions supplied by the TV and wall mount manufacturers.
- If you have any doubts about your ability to safely wall mount your TV, get help from a professional installer.
- Make sure that the wall where you are mounting the TV is appropriate. Some wall mounts are not designed to be mounted to walls backed with steel studs or cinder blocks. If you are unsure, ask a professional installer.

CEA® Consumer Electronics Association

- TVs can be heavy. At least two people are required for safe wall mount installation.

# Important safety instructions

**CAUTION**

**RISK OF ELECTRIC SHOCK**

**DO NOT OPEN**

This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your TV. This label is located on the back of your TV.

This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your TV.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The *mains plug* is the disconnecting device. The plug must remain readily operable.
16. The apparatus with grounding-type plug is a class I apparatus. Class I apparatus need to be connected to earth ground wire to prevent possible electric shock. Make sure that you connect the class I apparatus to a mains socket outlet with a protective earthing connection.
17. Remote control batteries should not be exposed to excessive heat such as sunshine, fire, or the like.
18. The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.

## Warnings

***Electric shock hazard***

To reduce the risk of fire or electric shock, do not remove any cover or expose the device to rain or moisture. No user-serviceable parts are inside. Refer servicing to qualified service technicians.

***Lightning***

For added protection for your device receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the power outlet and disconnect any antenna or cable system. This helps prevent property damage and personal injury from lightning and power line surges.

***Power lines***

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

***Handling the LCD panel***

- Your TV's screen is made of glass. Do not drop your TV or hit, jolt, or press hard against the LCD panel. If the screen breaks, be careful of broken glass.
- If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately gargle, rinse, and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water.

***Replacement parts***

When replacement parts are required, make sure that the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, personal injury, or other hazards.

### *Safety check*

After completing any service or repair to this device, ask the service technician to perform routine safety checks to determine that your TV is in correct operating condition.

### *Power source*

Operate your TV only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult an electrician or your local power company.

## Cautions

### *Damage requiring service*

Unplug this TV from the power outlet and refer servicing to qualified service personnel under the following conditions:

- When the power supply cord or plug is damaged or frayed.
- If liquid has been spilled or objects have fallen into your TV.
- If your TV has been exposed to rain or water.
- If your TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore your TV to its normal operation.
- If your TV has been dropped or damaged in any way.
- When your TV exhibits a distinct change in performance.

### *Outdoor antenna grounding*

If an outside antenna or cable system is connected to your TV, make sure that the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to correct grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of the antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

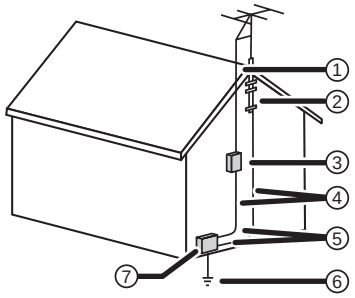


1. Antenna lead-in wire
2. Grounding clamp
3. Antenna discharge unit
4. Grounding conductors
5. Ground clamps
6. Power service grounding electrode system
7. Electric service equipment

### *Note to CATV system installer*

Article 820 of the National Electrical Code, ANSI/NFPA No. 40 provides guidance for correct grounding. Specifically, it states that the cable ground must be connected to the grounding system of the building as close to the point of cable entry as practical.

### *Condensation*

Moisture will form on the TV if the TV is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens, the TV's performance may be impaired. To prevent this, let the TV stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually.

Condensation may also form during the summer if the TV is exposed to the breeze from an air conditioner. In such cases, change the location of the TV.

### *Mobile telephone warning*

To avoid interference with your TV picture and sound, operating problems, or even damage, keep your cordless and cellular telephones away from the TV.

## End of life directives

Your TV contains tin-lead solder and a fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated for environmental reasons. Your TV also contains material that can be recycled and reused. For disposal or recycling information, contact your local authorities or the Electronic Industries Alliance at www.eia.org to find a recycler in your area.

## Non-active pixels

The LCD panel contains almost 3 million thin film transistors, which provide exceptionally sharp video quality. Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green, or red point. These non-active pixels do not adversely affect the performance of your TV, and are not considered defects.

# Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-L32Q-10A represents the state of the art in LCD TV design and is designed for reliable and trouble-free performance.

# Installing the stand or wall-mount bracket

## Installing the stand

**To install the stand:**

1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.

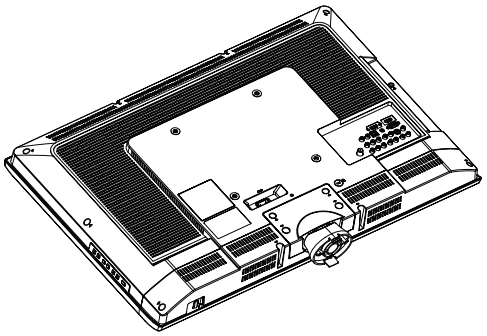

2 Secure the base to the stand with the four included screws.

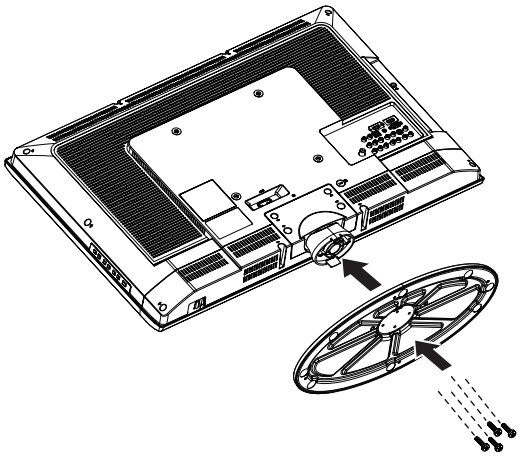

## Installing a wall-mount bracket

**Warning**

This apparatus is intended to be supported by UL Listed wall mount bracket.

**To install a wall-mount bracket:**

**Warning**

These servicing instructions are for use by qualified service personnel only. To reduce the risk of hazards, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

1 Remove the four screws that secure the stand to your TV.

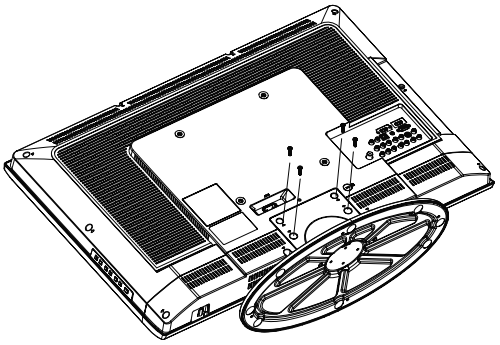

2 Remove the stand.

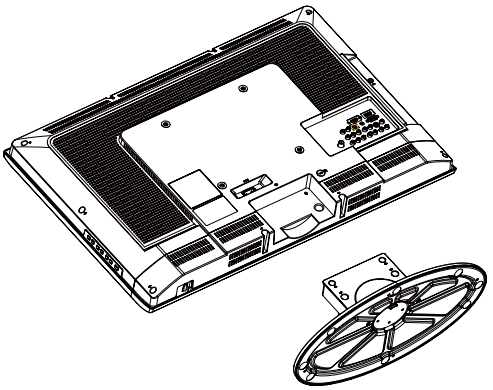

3 Attach the wall-mount bracket with M6 screws (not included).

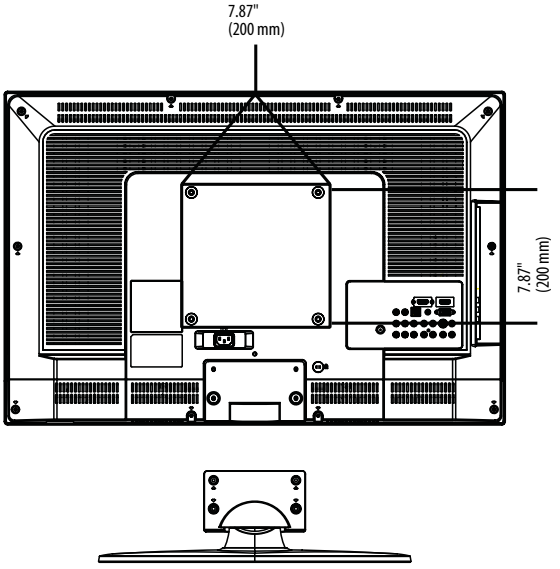

# TV components

## Accessories

Make sure that the following accessories are provided in the packaging:

- Remote control
- AA batteries (2)
- Remote control holder
- AC power cord
- Component cable
- Cleaning cloth
- User Guide
- Quick Setup Guide

## Cleaning cloth

The cleaning cloth is for cleaning the TV screen only. Do not use the cleaning cloth to clean any other part of your TV.

## Front

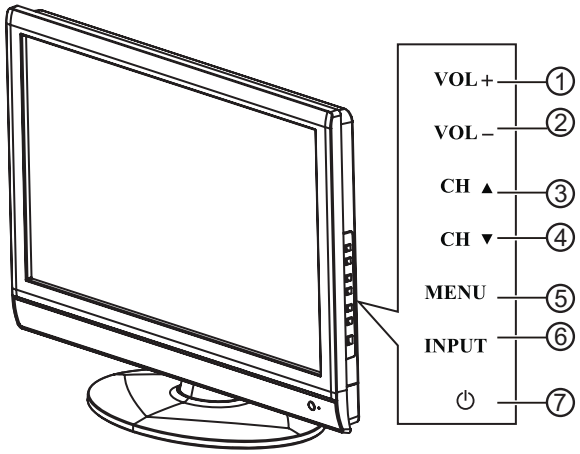


| # | Button | Description |
|---|---|---|
| 1 | VOL+ | Press to increase the volume. In Menu mode, functions as the right arrow to go to the next menu or increase a setting. |
| 2 | VOL– | Press to decrease the volume. In Menu mode, press to decrease a setting. |
| 3 | CH ▲ | Press to go to the next higher channel. In Menu mode, functions as the up arrow. |
| 4 | CH ▼ | Press to go to the next lower channel. In Menu mode, functions as the down arrow. |
| 5 | MENU | Press to open the on-screen menu. |
| 6 | INPUT | Press to open the input source menu, then press the arrow keys to cycle through the available input sources. In Menu mode, functions as the **OK/ENTER** button. |
| 7 | ⏻ (power) | Press to turn your TV on or off (standby mode). When your TV is off, power still flows into it. To disconnect power, unplug the power cord. |

## Back

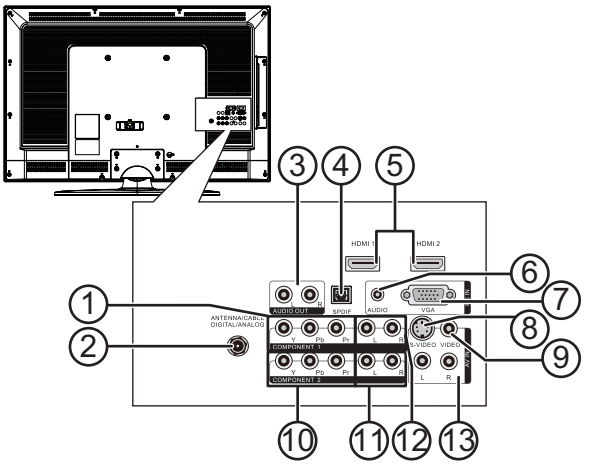


| # | Jack | Description |
|---|---|---|
| 1 | COMPONENT 1 Y/Pb/Pr | Connect the video for a component video device to these jacks. For more information, see “Connecting a component video device” on page 12. |
| 2 | ANTENNA/CABLE DIGITAL/ANALOG | Connect an antenna or cable TV to this jack. For more information, see “Connecting an outdoor antenna” on page 9 or “Connecting cable TV” on page 9. |
| 3 | AUDIO OUT R / L | Connect an external sound system to these jacks. For more information, see “Connecting an analog audio amplifier” on page 13. |
| 4 | SPDIF | Connect an audio amplifier to this jack. For more information, see “Connecting a digital audio amplifier” on page 13. |
| 5 | HDMI 1/HDMI 2 | Connect HDMI devices to these jacks. For more information, see “Connecting an HDMI device” on page 11. |
| 6 | PC IN AUDIO | Connect the audio for a computer to this jack. For more information, see “Connecting a computer” on page 12. |
| 7 | PC IN VGA | Connect the video (VGA) for a computer to this jack. For more information, see “Connecting a computer” on page 12. |
| 8 | AV IN 1 S-VIDEO | Connect the video for an S-Video device to this jack. For more information, see “Connecting an S-Video device” on page 12. |
| 9 | AV IN 1 VIDEO | Connect the video for a standard AV device to this jack. For more information, see “Connecting a VCR” on page 10. |
| 10 | COMPONENT 2 Y/Pb/Pr | Connect the video for a component video device to these jacks. For more information, see “Connecting a component video device” on page 12. |
| 11 | COMPONENT 2 L/R | Connect the audio for a component video device to these jacks. For more information, see “Connecting a component video device” on page 12. |
| 12 | COMPONENT 1 L/R | Connect the audio for a component video device to these jacks. For more information, see “Connecting a component video device” on page 12. |
| 13 | AV IN 1 L/R | Connect the audio for an S-Video or standard AV device to these jacks. For more information, see “Connecting an S-Video device” on page 12 or “Connecting a VCR” on page 10. |

## Side

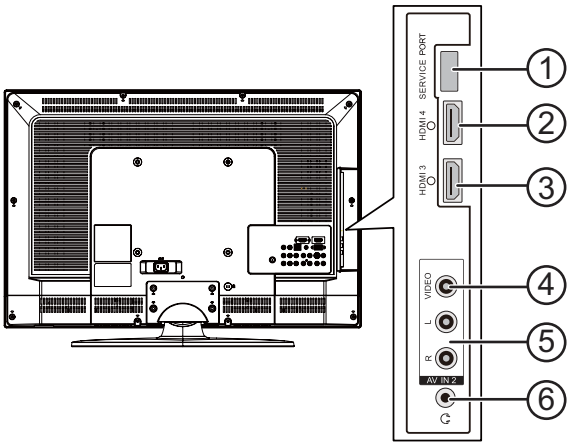


| # | Jack | Description |
|---|---|---|
| 1 | SERVICE PORT | For service only. |
| 2 | HDMI 4 | Connect an HDMI device to this jack. For more information, see “Connecting an HDMI device” on page 11. |
| 3 | HDMI 3 | Connect an HDMI device to this jack. For more information, see “Connecting an HDMI device” on page 11. |
| 4 | AV IN 2 VIDEO | Connect the video for a standard AV device to this jack. For more information, see “Connecting a VCR” on page 10. |
| 5 | AV IN 2 L/R | Connect the audio for an S-Video or standard AV device to these jacks. For more information, see “Connecting an S-Video device” on page 12 or “Connecting a VCR” on page 10. |
| 6 | 🎧 (headphone) | Connect headphones to this jack. For more information, see “Connecting headphones” on page 12. |

## Remote control

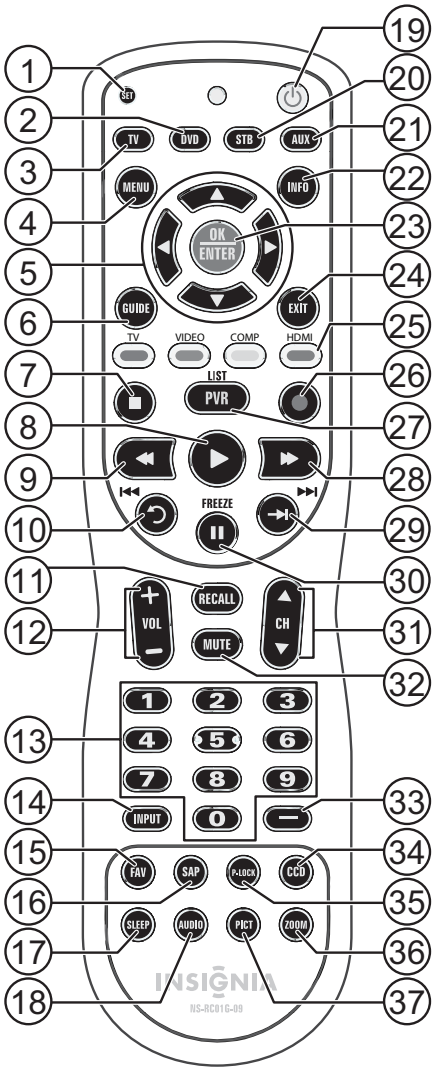


| # | Button | Description |
|---|---|---|
| 1 | SET | Press to program the remote control to control connected devices. For more information, see “Programming your remote control” on page 29. |
| 2 | DVD | Press to control a connected DVD player. You must program the remote control before this button works. For more information, see “Programming your remote control” on page 29. |
| 3 | TV | Press to control your TV. |
| 4 | MENU | Press to open the on-screen menu. |
| 5 | ◄►▲▼ | Press to move left, right, up, or down in on-screen menus. |
| 6 | GUIDE | Press to display the program guide. For more information, see “Displaying additional information” on page 15. |
| 7 | ■ (stop) | Press to stop playback on DVD, DVR, PVR, or CD devices. You need to program the remote control to control connected devices. For more information, see “Programming your remote control” on page 29. |
| 8 | ▶ (play) | Press to start playback on DVD, DVR, PVR, or CD devices. You need to program the remote control to control connected devices. For more information, see “Programming your remote control” on page 29. |

| # | Button | Description |
|---|---|---|
| ⑨ | ◀◀ (fast reverse) | Press to fast reverse on DVD, DVR, PVR, or CD devices. You need to program the remote control to control connected devices. For more information, see "Programming your remote control" on page 29. |
| ⑩ | ⏮/ ↩ (skip back) | In DVD, DVR, PVR, or CD mode, press to skip back to the previous title or track. You need to program the remote control to control connected devices. For more information, see "Programming your remote control" on page 29. |
| ⑪ | RECALL | In TV mode, press to return to the previous channel. |
| ⑫ | VOL+/VOL– | Press to increase or decrease the volume. |
| ⑬ | Numbers | Press to ener channel numbers and the parental control password.<br>When programming the remote control, press to enter device and programming codes. |
| ⑭ | INPUT | Press to open the *Source List*, then press ▲ or ▼ to cycle through the available input sources.. For more information, see "Selecting the video input source" on page 14. |
| ⑮ | FAV | Press to open the Favorite Channel list. For more information, see "Setting up a favorite channel list" on page 19. |
| ⑯ | SAP | In analog TV mode, press to select **Stereo**, **Mono** or **SAP**. In digital TV mode, press to select the audio track (language).<br>For more information, see "Adjusting the sound" on page 16. |
| ⑰ | SLEEP | Press to set the sleep timer. You can select **Off**, **5**, **10**, **15**, **30**, **60**, **90**, **120**, **180**, or **240** minutes. For more information, see "Setting the sleep timer" on page 26. |
| ⑱ | AUDIO | Press to adjust the treble or bass. For more information, see "Adjusting the sound" on page 16. |
| ⑲ | ⏻ (power) | Press to turn your TV on or off (standby mode). When your TV is off, power still flows into it. To disconnect power, unplug the power cord. |
| ⑳ | STB | Press to control a connected set-top box. |
| ㉑ | AUX | Press to control a connected device. You need to program the remote control to control connected devices. For more information, see "Programming your remote control" on page 29. |
| ㉒ | INFO | Press to display TV status information, such as the channel number, channel name (if available), or signal source. For more information, see "Displaying additional information" on page 15. |
| ㉓ | OK/ENTER | Press to confirm selections or changes. |
| ㉔ | EXIT | Press to close the on-screen menu. |
| ㉕ | Video input buttons | **TV**—Press to select TV as the video source.<br>**VIDEO**— Press one or more times to select the device connected the **AV 1 VIDEO**, **AV 2 VIDEO**, or **S-VIDEO** jack.<br>**COMP**—Press one or more times to select the device connected to the **COMPONENT 1** or **COMPONENT 2** video jacks.<br>**HDMI**—Press one or more time to select the device connected to **HDMI 1**, **HDMI 2**, **HDMI 3**, or **HDMI 4**.<br>For more information, see "Selecting the video input source" on page 14. |
| ㉖ | ● (record) | In DVD, DVR, PVR, or CD mode, press to begin recording. You need to program the remote control to control connected devices. For more information, see "Programming your remote control" on page 29. |
| ㉗ | PVR/LIST | Press to list all the recorded programs in a PVR/STB. You need to program the remote control to control connected devices. For more information, see "Programming your remote control" on page 29. |

| # | Button | Description |
|---|---|---|
| ㉘ | ▶▶ (fast forward) | Press to fast forward on DVD, DVR, PVR, or CD devices. You need to program the remote control to control connected devices. For more information, see "Programming your remote control" on page 29. |
| ㉙ | ⏭/⏭ (skip forward) | In DVD, DVR, PVR, or CD mode, press to skip forward to the next title or track. You need to program the remote control to control connected devices. For more information, see "Programming your remote control" on page 29. |
| ㉚ | II/FREEZE | Press to freeze the video image. Press again to unfreeze the image. For more information, see "Freezing the picture" on page 16.<br>**Caution:** Do not freeze the video image for long periods of time. You may damage the TV screen. |
| ㉛ | CH ▲/CH ▼ | Press to go change TV channels. For more information, see "Selecting a channel" on page 15. |
| ㉜ | MUTE | Press to mute the sound. Press again to restore the sound. |
| ㉝ | — | Press to enter a digital sub-channel number. For more information, see "Selecting a channel" on page 15. |
| ㉞ | CCD | Press to turn closed captioning on or off. You can select **CC Off**, **CC On** or **CC On when Mute**. For more information, see "Viewing closed captioning" on page 24. |
| ㉟ | P-LOCK | If Parental Lock is turned on, when you enter the correct password to unblock the channels, you can press **P-LOCK** to block the channels again. |
| ㊱ | ZOOM | Press to select the aspect ratio. For more information, see "Adjusting Advanced Video settings" on page 16. |
| ㊲ | PICT | Press to select the video modes. You can select **Vivid**, **Standard**, **Energy Savings**, **Theater**, **Sports**, or **Custom**. For more information, see "Adjusting the TV picture" on page 15. |

# Using the remote control

## Installing the remote control batteries

**To install the remote control batteries:**

**1** Remove the battery cover.

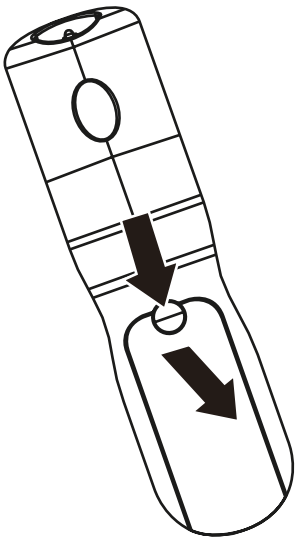

2 Insert two AA batteries into the battery compartment. Make sure that you match the + and – symbols on the batteries with the + and – symbols in the battery compartment.

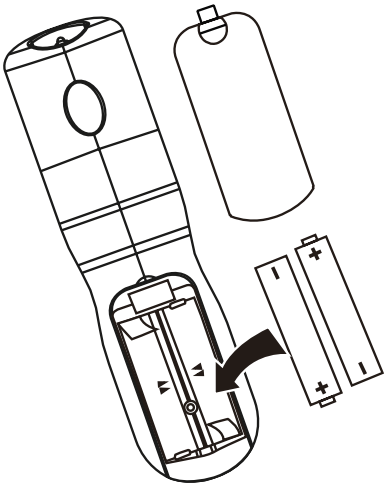

3 Replace the battery cover.

**Cautions**

- Batteries should not be exposed to excessive heat, such as sunshine, heat registers, or fire.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.
- Make sure that batteries are disposed of correctly. Do not burn or incinerate.

**Notes**

- Do not mix batteries of different types.
- Do not mix old and new batteries.
- Remove batteries when the charge is depleted.
- If the remote control is not going to be used for an extended period of time, remove the batteries.

## Aiming the remote control

**To aim the remote control:**

- Point the remote control towards the remote sensor on the front of your TV.

**Notes**

- Do not expose the remote control to shock or liquids.
- Do not use the remote control in an area with high humidity.
- Do not place the remote control in direct sunlight.
- Do not place objects, such as furniture, between the remote control and the remote sensor.
- The remote control may not work if direct sunlight or bright light shines on the remote sensor. Either move your TV or change the angle at which you use the remote control.

## Using the remote control holder

Your TV comes with a remote control holder you can put the remote control in when you are not using it. You can put the holder on a table or mount it on a wall.

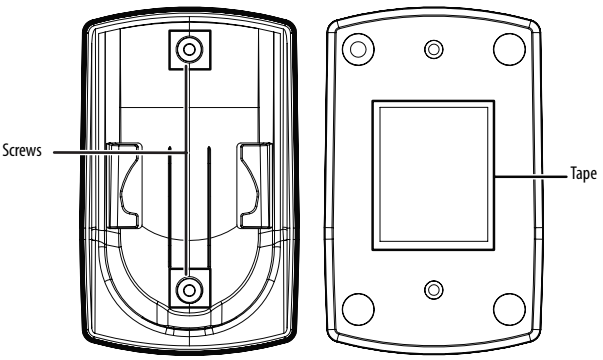


**Tips**

- Different types of walls may require different types of screws. If you want to wall mount the remote control holder, make sure that you use the correct screws for the type of wall. (Screws are not provided.)
- The remote control holder is shipped with separate adhesive tape for wall mounting. This tape may not work with all types of walls. Make sure that you use the correct tape for the type of wall.

## Programming a universal remote control to work with your TV

You can operate your Insignia TV with a new or existing universal remote control.

**To program a universal remote control:**

1 Find the code for your universal remote control by identifying its model (or your set-top box's remote control manufacturer and model) on the charts below, then making note of the numbered code below it. You will use the numbered code to program your remote control to work with your Insignia TV.

**Insignia TV codes for universal remote controls (for all Insignia TVs manufactured after Jan. 1, 2007)**

| Universal remote control manufacturers and models | | | | |
|---|---|---|---|---|
| Philips PHDVD5, PH5DSS, PMDVR8, PDVR8 | RCA RCU807 | One for All URC-6690 | Sony RM-VL600 | |
| **115** | **135** | **0464** | **8043** | |

| Set-top box manufacturers and models | | | | |
|---|---|---|---|---|
| Comcast M1057 | Dish Network VIP508, VIP622 | Motorola DRC800 | TIVO Series 3, HD | DirectTV RC23 |
| **0463** | **720** | **0463** | **0091** | **10463** |

Codes for other remote controls are available online at:

www.insigniaproducts.com/universalcontrolcodes.aspx

**Tips**

- The brand name is often visible on the front of the universal remote control, and the model number is often visible on the back.
- If your universal remote control isn't listed on the chart, refer to your universal remote control's instructions and try codes for the brands Orion, Emerson, Memorex, Sansui, Sylvania, or Zenith. You may need to try several codes before finding a match.

**2** Follow your universal remote control's instructions to enter the TV code you found in Step 1.

**Tips**

- If your universal remote control has a code search feature, run a code search to identify a code that matches your TV. See your universal remote control's instructions for details.
- If your universal remote control has a "Learn" feature, you can manually program it using the Insignia TV remote to "teach" the commands one at a time. See your universal remote control's instructions for details.

**3** If all else fails, you must use a different universal remote control that can operate both your set-top box and your TV. Four such remotes are listed on the chart, but many other compatible models are available in the market.

For more help, call technical support for your universal remote control or set-top box manufacturer, or call the Insignia Customer Care Center at 1-877-467-4289.

# Making connections

## Connecting the power

**To connect the power:**

- Plug the power cord into the **AC IN** jack on the back of your TV, then plug the other end of the cord into a power outlet.

**Cautions**

- Make sure that you use the correct type of power. See the label on your TV.
- If you do not intend to use your TV for an extended period of time, unplug the power cord from the power outlet.

## Connecting an outdoor antenna

Antenna cables come in two types: 75 ohm and 300 ohm.







**To connect an outdoor antenna:**

**1** Turn off your TV and all connected equipment.

**2** If your antenna cable has a 75 ohm connector, connect the cable to the **ANTENNA/CABLE DIGITAL/ANALOG** jack on the back of your TV.

Or,

If your antenna cable has a 300 ohm connector, connect the cable to a 300-75 ohm adapter (not included), connect the adapter to a 75 ohm cable, then connect the other end of the 75 ohm connector to the **ANTENNA/CABLE DIGITAL/ANALOG** jack on the back of your TV.

**3** Connect the other end of the cable to the antenna jack.

## Connecting an indoor antenna

**To connect an indoor antenna:**

**1** Turn off your TV and all connected equipment.

**2** Connect the included dual-telescoping dipole antenna to the **ANTENNA/CABLE DIGITAL/ANALOG** jack on the back of your TV.

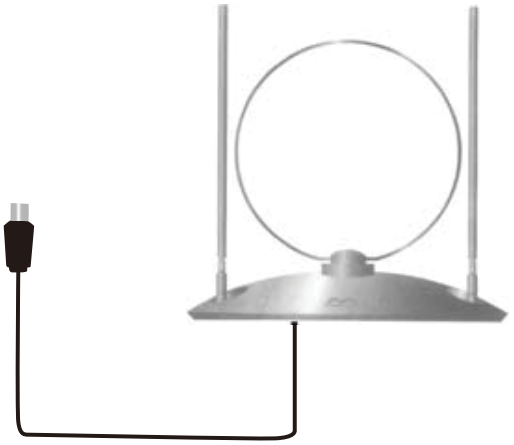

**Note**

Distance from the transmitting source, a man-made shelter, or natural atmospheric conditions might influence the reception, which is not related to antenna performance.

## Connecting cable TV

Your TV has a 75 ohm jack for connecting cable TV.

Some cable TV providers scramble the signals for "premium" (pay) channels. To view these channels, you need a converter/descrambler box.

If you do not require a converter/descrambler box, you can connect your cable TV directly to your TV. For more information, see "No converter/descrambler box" on page 10.

If you require a converter/descrambler box, you can connect your cable TV using an RF switch (not included). For more information about connecting a converter/descrambler box, see "With converter/descrambler box" on page 10 and contact your cable TV provider.

You can also connect cable TV using an HDMI, component video, S-Video, or AV connection, depending on your cable box. For more information, see "Connecting cable TV via a cable TV box" on page 10.

***No converter/descrambler box***

**To connect cable TV without a converter/descrambler box:**

1. Connect one end of a 75 ohm cable to the coaxial jack on the back of your TV.

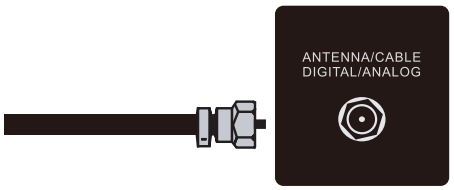


2. Connect the other end of the cable to the cable TV wall outlet.

***With converter/descrambler box***

If your cable box descrambles only some channels (such as premium channels), you need a two-way splitter, an RF (A/B) switch, and four lengths of antenna cable. The two-way splitter and RF switch are not provided.

**To connect cable TV with a converter/descrambler box:**

- Use the following illustration as a guide to connect a converter/descrambler box.

  Set the RF switch to the **A** position to tune to unscrambled channels using your TV remote control. Set the RF switch to the **B** position to watch scrambled channels using the converter/descrambler controls.

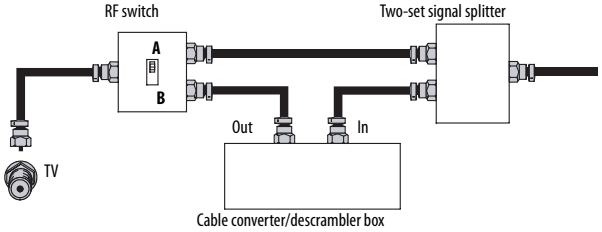


***Connecting cable TV via a cable TV box***

1. Connect the incoming cable from the cable wall jack to the cable-in jack on the cable box.
2. Depending on the jacks available on the cable box, connect a cable from the outgoing jacks on the cable box to the corresponding jacks on the back of your TV. The connection can be to the cable-out, HDMI, component video, S-Video, or AV jack.

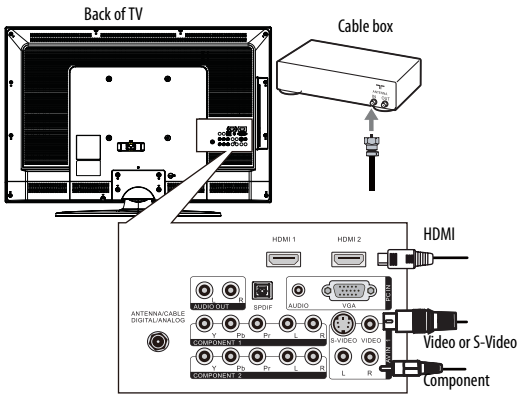


3. If you use a component video, S-Video, or AV cable, connect an audio cable to the corresponding jacks on the back of your TV and on the cable box.

## Connecting satellite TV via a satellite TV box

**To connect satellite TV:**

1. Connect the incoming cable from the satellite wall jack to the satellite-in jack on the satellite box.
2. Depending on the jacks available on the satellite TV receiver (set-top box), connect a cable from the outgoing jacks on the satellite box to the corresponding jacks on the back of your TV. The connection can be to the HDMI, component video, S-Video, or AV jack.

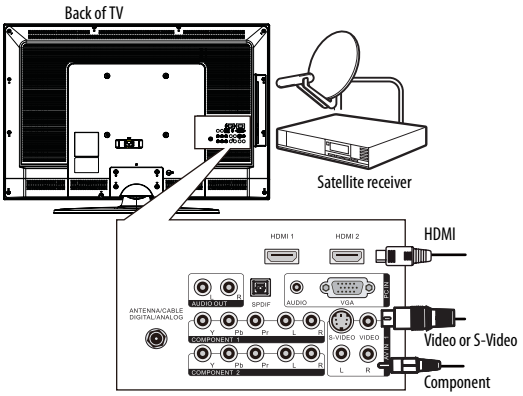


3. If you use a component video, S-Video, or AV cable, connect an audio cable to the corresponding jacks on the back of your TV and on the satellite box.

## Connecting a VCR

**To connect a VCR:**

1. Connect an AV cable to the **AV IN 1 VIDEO** and **AV IN 1 L** and **R** audio jacks on the back of your TV.

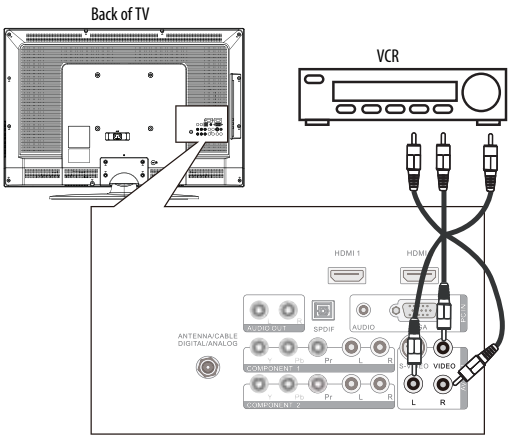

2 Connect the other end of the cable to the **VIDEO OUT** and **AUDIO OUT** jacks on the VCR.

**Note**

If a device is connected to the **S-VIDEO** jack, the **S-VIDEO** jack controls the **AV IN 1 L** and **R** jacks.

To assign the audio jacks to the **AV IN 1 VIDEO** jack, unplug the S-Video device.

3 Turn on your TV, then turn on the VCR.

4 Press **INPUT** to open the *Source List*, then press ▲ or ▼ to select **AV1**.

5 Insert a videotape into the VCR, then press **PLAY**.

## Connecting a camcorder or game console

**To connect a camcorder or game console:**

1 Connect an AV cable to the **AV IN 2 VIDEO** and **AV IN 2 L** and **R** audio jacks on the side of your TV.

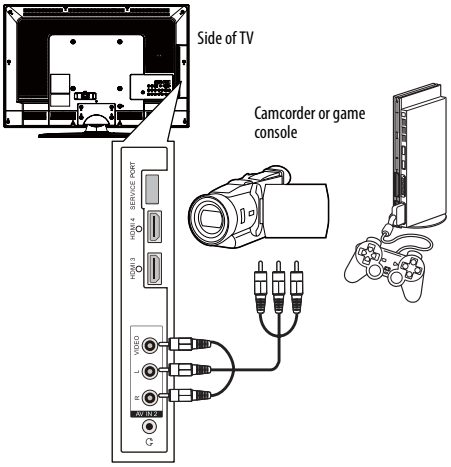


2 Connect the other end of the cable to the **VIDEO OUT** and **AUDIO OUT** jacks on the camcorder or game console.

3 Turn on your TV, then turn on the camcorder or game console.

4 Press **INPUT** to open the *Source List*, then press ▲ or ▼ to select **AV2**.

## Connecting an HDMI device

You can connect an HDMI device to the **HDMI 1** or **HDMI 2** jack on the back of your TV or to the **HDMI 3** or **HDMI 4** jack on the side of your TV.

**To connect an HDMI device to the back of your TV:**

1 Connect an HDMI cable to the **HDMI 1** or **HDMI 2** jack on the back of your TV and to the **HDMI OUT** jack on the HDMI device.

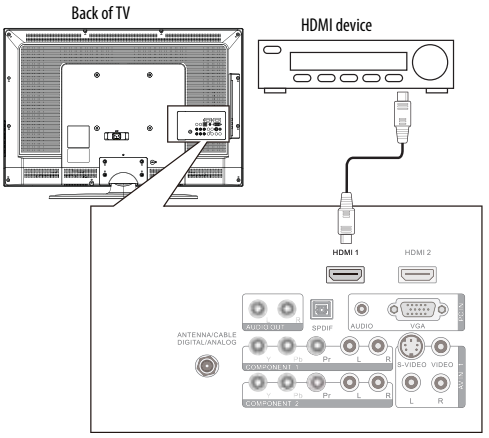


2 Turn on your TV, then turn on the HDMI device.

3 Press **INPUT** to open the *Source List*, then press ▲ or ▼ to select **HDMI 1** or **HDMI 2**.

**Note**

You can connect a DVI device to the **HDMI 1** jack on the back of your TV using an HDMI-to-DVI adapter. Next connect an audio cable to the **PC IN AUDIO** jack and to the audio out jack on the DVI device. You cannot connect a DVI device to the **HDMI 2** jack on the back of your TV.

**To connect an HDMI device to the side of your TV:**

1 Connect an HDMI cable to the **HDMI 3** or **HDMI 4** jack on the side of your TV and to the **HDMI OUT** jack on the HDMI device.

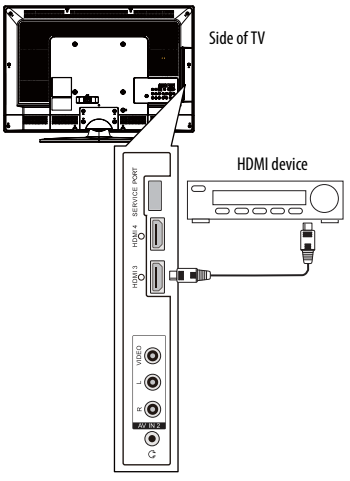


2 Turn on your TV, then turn on the HDMI device.

3 Press **INPUT** to open the *Source List*, then press ▲ or ▼ to select **HDMI 3** or **HDMI 4**.

**Note**

You cannot connect a DVI device to the **HDMI 3** and **HDMI 4** jack on the side of your TV.

## Connecting a component video device

**To connect a component video device:**

1. Connect a component video cable to the **COMPONENT 1** or **COMPONENT 2 Y**, **Pb**, and **Pr** jacks on the back of your TV and to the **COMPONENT OUT** video jacks on the component video device.

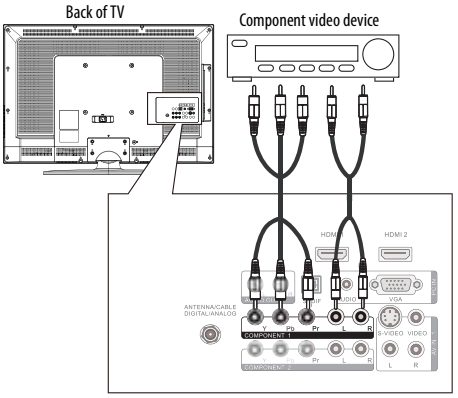


2. Connect an audio cable to the **COMPONENT 1** or **COMPONENT 2 L** and **R** audio jacks on the back of your TV and to the **COMPONENT AUDIO OUT** jacks on the component video device.
3. Turn on your TV, then turn on the component video device.
4. Press **INPUT** to open the *Source List*, then press ▲ or ▼ to select **Component 1** or **Component 2**.

## Connecting an S-Video device

**To connect an S-Video device to the back of your TV:**

1. Connect an S-Video cable to the **AV IN 1 S-VIDEO** jack on the back of your TV and to the **S-VIDEO OUT** jack on the S-Video device.

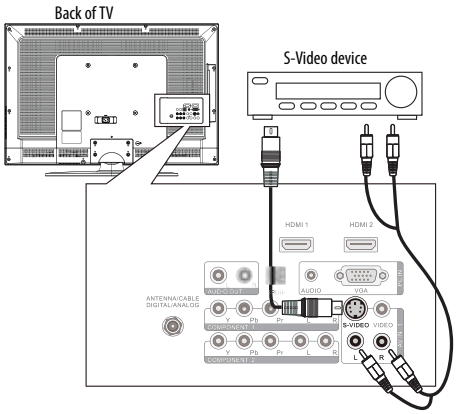


2. Connect an audio cable to the **AV IN 1 L** and **R** jacks on the back of your TV and to the corresponding audio out jacks on the S-Video device.
3. Turn on your TV, then turn on the S-Video device.
4. Press **INPUT** to open the *Source List*, then press ▲ or ▼ to select **AV1**.

## Connecting a computer

**Note**

If the computer has an HDMI jack, you can connect it to an HDMI jack on your TV.

**To connect a computer:**

1. Connect a VGA cable to the **PC IN VGA** jack on the back of your TV and the **VGA** jack on the computer.

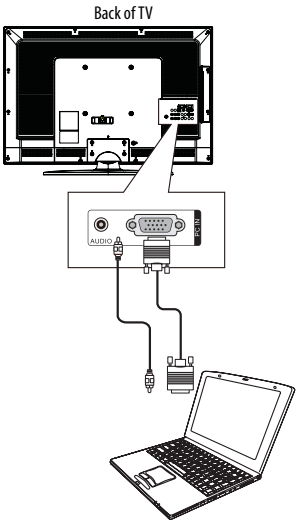


2. Connect an audio cable to the **PC IN AUDIO** jack on the back of your TV and to the **AUDIO OUT** jack on the computer.
3. Turn on your TV, then turn on the computer.
4. Press **INPUT** to open the *Source List*, then press ▲ or ▼ to select **VGA**.

**Note**

When the computer enters standby mode, your TV turns off. If your TV does not turn on when you "wake" your computer, press ⏻ (power) on your TV or remote control.

## Connecting headphones

**To connect headphones:**

- Plug headphones into the 🎧 jack on the side of your TV.

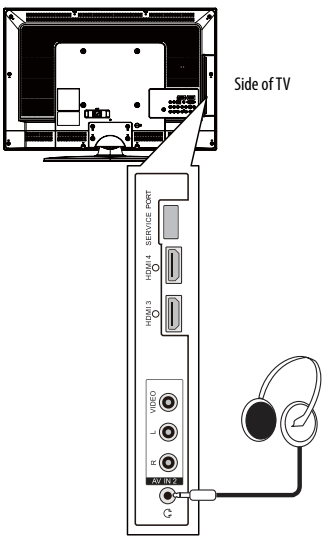

**Note**

When headphones are plugged in, the sound from your TV's speakers is muted.

## Connecting a digital audio amplifier

**To connect a digital audio amplifier:**

- Connect a digital audio cable to the **SPDIF** jack on the back of your TV and to the digital audio jack on the amplifier.

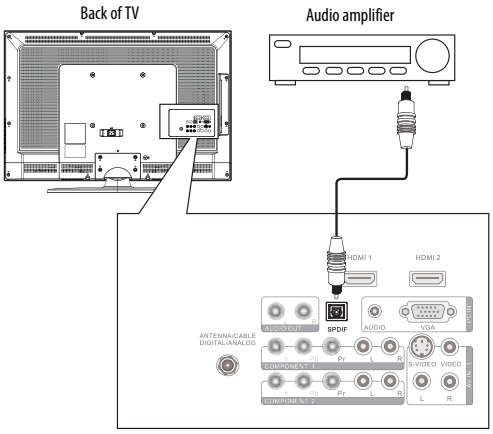


## Connecting an analog audio amplifier

**To connect an analog audio amplifier to your TV:**

- Connect a standard audio cable to the **AUDIO OUT L** and **R** audio jacks on the back of your TV and to the **AUDIO IN** jacks on the amplifier.

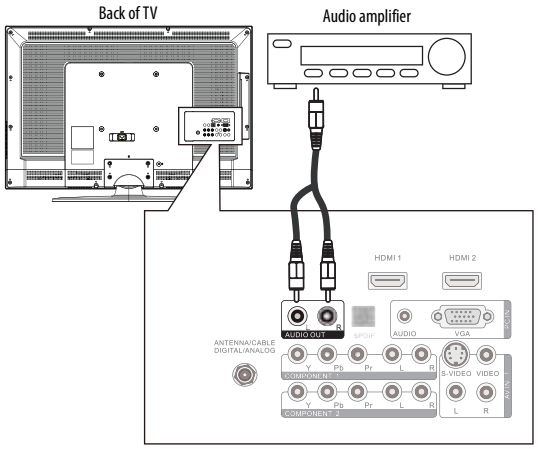


# Turning on your TV for the first time

The first time you turn on your TV, the Setup Wizard opens. The Setup Wizard guides you through setting up basic settings including the menu language, TV signal source, and the channel list.

**To set up your TV:**

1. Make sure that you have:
   - Installed the remote control batteries. (See page 7 for details).
   - Connected an antenna, cable TV, or satellite TV. (See pages 9, through page 10 for details.)
   - Connected the power cord. (See page 9 for details.)
2. Press ⏻ (power) to turn on your TV. The *Choose your menu Language* screen opens.

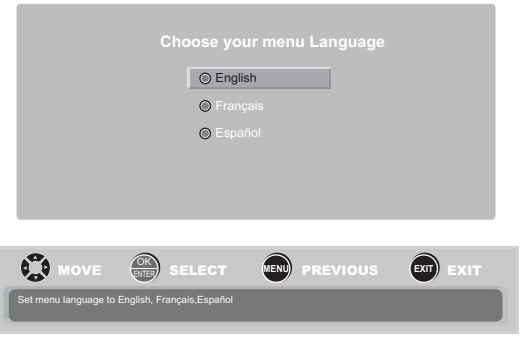


3. Press ▲ or ▼ to highlight **English**, **Français**, or **Español**, then press **OK/ENTER** to confirm your selection. The *Choose your TV source* screen opens.

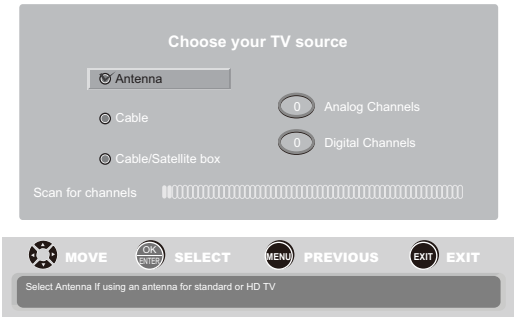


4. Press ▲ or ▼ to highlight **Antenna**, **Cable**, or **Cable/Satellite box** (if your cable TV uses a box, select **Cable/Satellite box**), then press **OK/ENTER**. If you chose **Antenna** or **Cable**, your TV automatically starts scanning for channels available in your viewing area. If you chose **Cable/Satellite box**, your TV does not need to scan for channels.

When the scan is complete, the Setup Wizard closes automatically.

**Note**

You can change the menu language or scan for channels at a later date. For more information, see "Selecting the menu language" on page 27 or "Automatically scanning for channels" on page 17.

# Understanding the basics

**Note**

Unless otherwise noted, all tasks in this section are based on using the remote control.

## Turning your TV on or off

**To turn your TV on and off:**

1. Make sure that the power cord is connected to your TV and a power outlet.
2. Press ⏻ (power) to turn on your TV. The power indicator LED turns blue.

3 Press ⏻ (power) again to turn off your TV. Your TV enters Standby mode and the power indicator LED turns red.

**Warning**

When your TV is off, power still flows into it. To disconnect power, unplug the power cord.

**Note**

If your TV does not detect a signal and you do not press any button for 15 minutes, your TV goes into Standby mode automatically.

## Selecting the video input source

### To select the video input source:

1 With your TV turned on, press **INPUT**. The *Source List* opens.

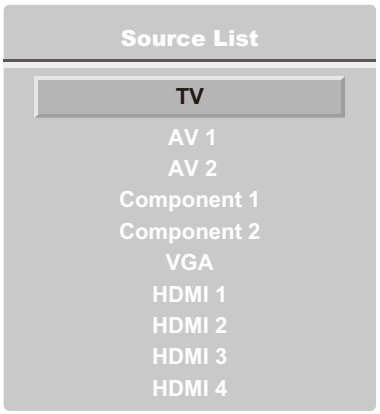


2 Press ▲ or ▼ to highlight the video input source your want. You can select:

- **TV**
- **AV 1**
- **AV 2**
- **Component 1**
- **Component 2**
- **VGA**
- **HDMI 1**
- **HDMI 2**
- **HDMI 3**
- **HDMI 4**

3 Press **OK/ENTER**.

You can also press a direct input button to select the video input source.

- Press **TV** to select **TV**.
- Press **VIDEO** once to select **AV 1**(for **AV1 IN VIDEO** or **AV1 IN S-VIDEO**).
- Press **VIDEO** twice to select **AV 2**.
- Press **COMP** once to select **Component 1**.
- Press **COMP** twice to select **Component 2**.
- Press **HDMI** once to select **HDMI 1**.
- Press **HDMI** twice to select **HDMI 2**.
- Press **HDMI** three times to select **HDMI 3**.
- Press **HDMI** four times to select **HDMI 4**.

## On-screen menu overview

### Picture menu

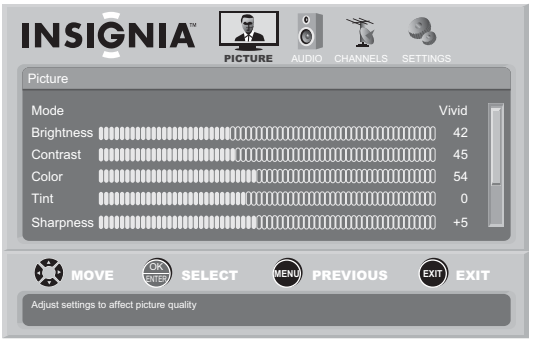


### Audio menu

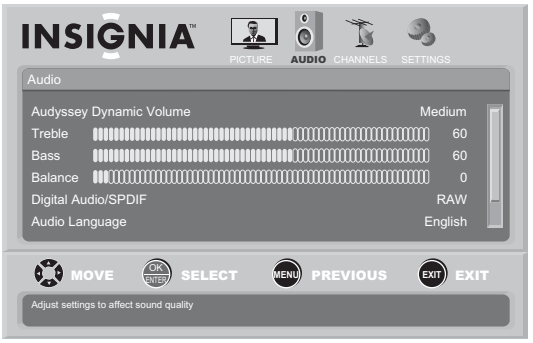


**Note**

The *Audio* menu will look slightly different when the **Equalizer** setting is changed to **Off** .

### Channels menu

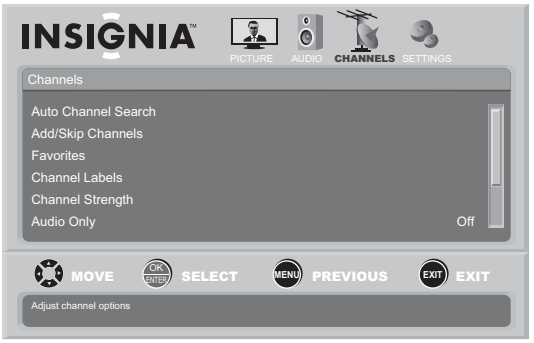


### Settings menu

## Navigating the menus

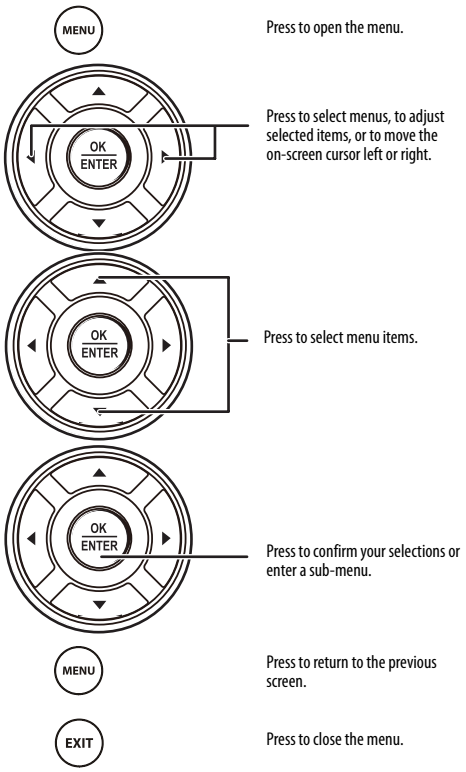
MENU
Press to open the menu.
OK ENTER
Press to select menus, to adjust selected items, or to move the on-screen cursor left or right.
OK ENTER
Press to select menu items.
OK ENTER
Press to confirm your selections or enter a sub-menu.
MENU
Press to return to the previous screen.
EXIT
Press to close the menu.

## Selecting a channel

**To select a channel:**

- Press **CH ▲**or **CH ▼** to go to the next higher or lower channel in the channel list.
- Press the number buttons to directly select a channel. For example, if you want to view channel 83, press **8**, then press **3**.
- Press **RECALL** to go to the last viewed channel.
- Press the number buttons for a main DTV channel, press **—**, then press the number for a DTV sub-channel to go to a digital sub-channel. For example, to go to sub-channel 1 of main channel 83, press **8**, **3**, **—**, then **1**.

**Note**

You can press the number buttons to go to a channel that was skipped in the channel scanning.

## Adjusting the volume

**To adjust the volume:**

- Press **VOL –** or **VOL +** to decrease or increase the volume.
- Press **MUTE** to turn off the sound. Press **MUTE** again to turn the sound back on.

## Displaying additional information

**To display additional information:**

- Press **INFO**. Your TV displays status information, such as the channel number, channel name (if available), signal source, program description, and DTV signal strength.

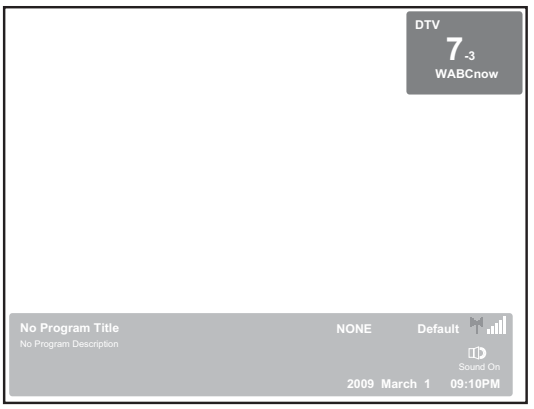


- Press **GUIDE** to show the digital program guide, which may show current the channel name, program name, time, rating, and summaries, depending on the information provided by the broadcaster.

# Adjusting the picture

**Note**

Unless otherwise noted, all tasks in this section are based on using the remote control.

## Adjusting the TV picture

**To adjust the picture:**

1. Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

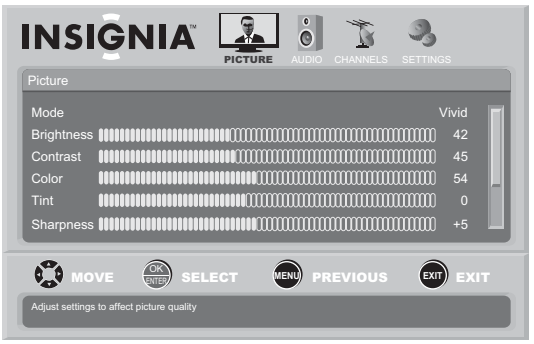


2. Press ▼ to highlight an option, then press **OK/ENTER** to access the sub-menu. You can select:
   - **Mode**—Selects the picture mode. You can select **Vivid**, **Standard**, **Energy Savings**, **Theater**, **Sports**, or **Custom**.
   - **Brightness**—Adjusts the picture brightness.
   - **Contrast**—Adjusts the contrast.
   - **Sharpness**—Adjusts the sharpness.
   - **Color**—Adjusts the color saturation.
   - **Tint**—Adjusts the picture tint.

- **Advanced Video**—Opens the *Advanced Video* menu. For more information, see "Adjusting Advanced Video settings" on page 16.
- **Reset Picture Settings**—Resets all picture settings to the factory defaults. When you select this option, a confirmation box opens. Press ◄ or ► to select **Yes** or **No**, then press **OK/ENTER** to confirm.

**Note**

- You may need to scroll down to see all the options.
- If you adjust **Brightness**, **Contrast**, **Color**, **Tint**, or **Sharpness** in **Vivid**, **Standard**, **Energy Savings**, **Theater**, or **Sports** mode, your TV switches to **Custom** mode automatically.

3 Press ◄ or ► to modify a scale or to move from left to right to make a choice in a submenu. Press ▲ or ▼ to move up or down when selecting from a list of choices in a submenu.

4 Press **MENU** to go to the previous menu or **EXIT** to close the menu.

## Adjusting Advanced Video settings

**To adjust advanced video settings:**

1 On the *Picture* menu, press ▲ or ▼ to highlight **Advanced Video**, then press **OK/ENTER** or ►. The *Advanced Video* menu opens.

2 Press ▼ to highlight an option, then press **OK/ENTER** to access the sub-menu. You can select:

- **Aspect Ratio**—Selects the aspect ratio. You can select **Normal**, **Zoom**, **Wide**, **Cinema**, or **Auto**. **Auto** is only available under TV mode and when **Auto Zoom** on the *Channels* menu is set to **On**. In VGA mode or HDMI mode when a computer is connected to the HDMI jack, only **Wide** and **Normal** are available.
- **Color temperature**—Selects the color temperature to change the overall color of the picture. You can select **Cool**, **Normal**, or **Warm**.
- **Backlight**—Controls the overall brilliance of the screen. You can adjust the backlight through a range of 0~30.
- **Noise Reduction**—Controls video noise. You can select **Off**, **Low**, **Middle**, or **High**.
- **Advanced Contrast**—When you see the pop-up menu, set **Adaptive Contrast** to **On** to adjust picture detail and brightness automatically and/or set **Dynamic Contrast** to **On** to automatically adjust the contrast between the light and dark areas of the picture.

3 Press ◄ or ► to modify a scale or to move from left to right to make a choice in a submenu. Press ▲ or ▼ to move up or down when selecting from a list of choices in a submenu.

4 Press **MENU** to go to the previous menu or **EXIT** to close the menu.

## Freezing the picture

**To freeze the picture:**

- Press **FREEZE**. Press again to unfreeze the picture.

**Caution**

Do not freeze the picture for long periods of time. You may damage your TV's screen.

# Adjusting the sound

**Note**

Unless otherwise noted, all tasks in this section are based on using the remote control.

## Adjusting the sound

**To adjust the sound:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

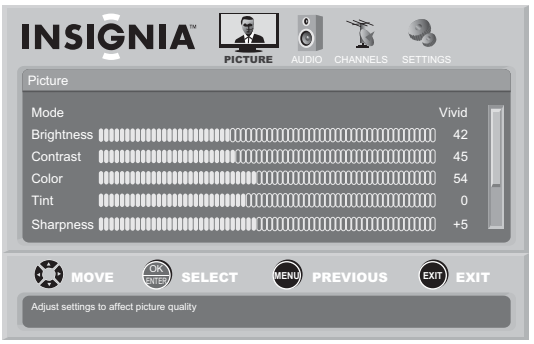


2 Press ◄ or ► to select **AUDIO**. The *Audio* menu opens.

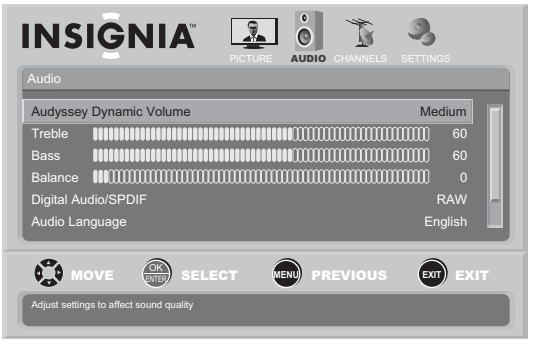

3 Press ▼ to highlight an option, then press **OK/ENTER** to access the sub-menu. You can select:

- **Treble**—Adjusts the high frequency sound levels.
- **Bass**—Adjusts the low frequency sound levels.
- **Audyssey Dynamic Volume**—Compensates for sudden changes in audio volume, you can select **Off, Low, Medium,** or **Heavy**.
- **Digital Audio/SPDIF**—Sends digital audio to an external audio system. You can select **RAW** or **PCM**.
- **MTS/SAP**—Selects the sound mode (for analog channel only).
  - **Mono**—Produces a clearer sound if stereo sound is difficult to hear.
  - **Stereo**—Produces dynamic stereo sound for sporting events and concerts.
  - **SAP**—Selects a second language, weather, or added commentary, if available.
- **Audio Language**—Selects the audio language based on the languages supported by a DTV channel.
- **Reset Audio Settings**— Reset all audio settings to factory defaults. When you select this option, a confirmation box opens. Press ◄ or ► to select **Yes** or **No**, then press **OK/ENTER** to confirm.

4 Press ◄ or ► to modify a scale or to move from left to right to make a choice in a submenu. Press ▲ or ▼ to move up or down when selecting from a list of choices in a submenu.

5 Press **MENU** to go to the previous menu or **EXIT** to close the menu.

## Playing TV audio only

When watching TV, you can turn off the TV picture and listen to the audio only.

**To play TV audio only:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

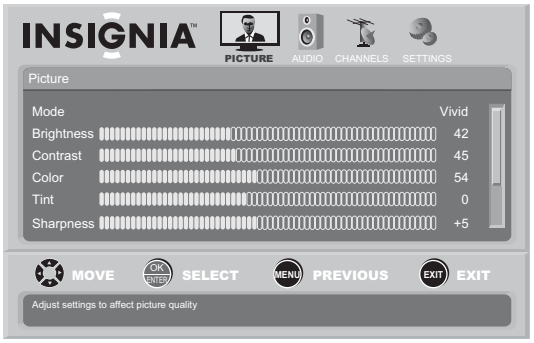


2 Press ◄ or ► to select **CHANNELS**. The *Channels* menu opens.

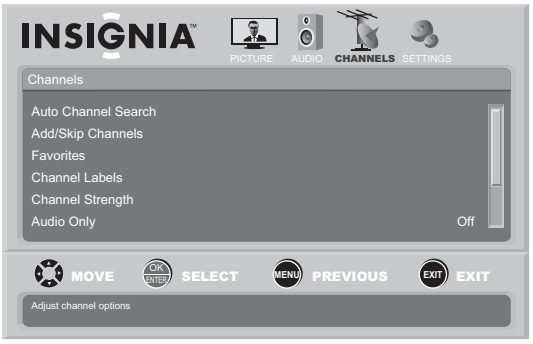


3 Press ▼ to highlight **Audio Only**, then press **OK/ENTER** or ► to access the sub-menu.

4 Press ▲ or ▼ to select **On** or **Off**.

**Note**

- It takes about 3 seconds after the menu closes and the picture disappears before the audio plays.
- **Audio Only** works only when the input source is TV and your TV is receiving a broadcast signal.
- To exit **Audio Only** mode, press any button. When you exit **Audio Only** mode, the **Audio Only** option is automatically reset to Off.

# Changing channel settings

**Note**

Unless otherwise noted, all tasks in this section are based on using the remote control.

## Automatically scanning for channels

When you scan for channels, your TV searches for channels with signals and stores the channel information in the channel list. When you press **CH** ▲ or **CH** ▼, your TV goes to the next or previous channel in the channel list and skips the channels that do not have signals.

If the TV signal source changes, for example you change from an outdoor antenna to cable TV (no box), you need to scan for channels.

**To automatically scan for channels:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

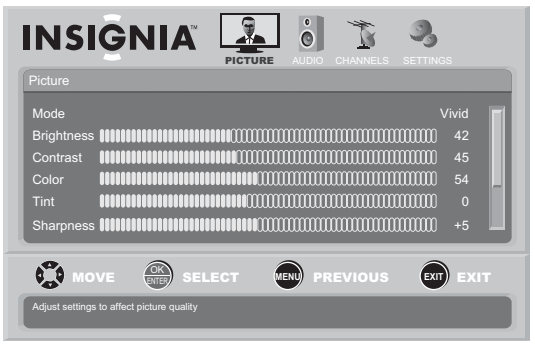

2 Press ◄ or ► to select **CHANNELS**. The *Channels* menu opens.

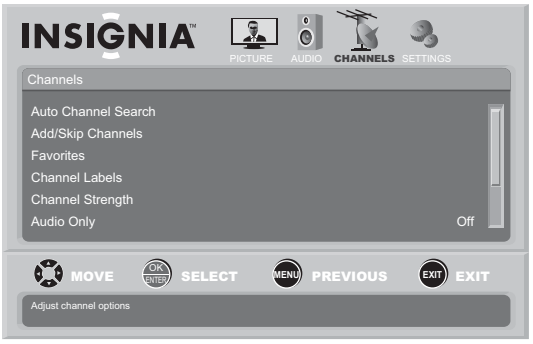


3 Press ▼ to highlight **Auto Channel Search**, then press **OK/ENTER** or ► to open the *Auto Channel Search* screen.

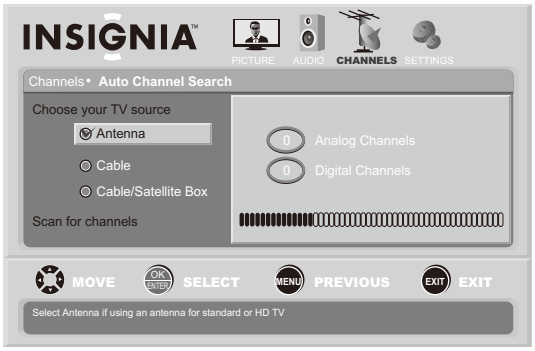


4 Press ▼ to highlight **Antenna**, **Cable**, or **Cable/Satellite Box**, then press **OK/ENTER** to start the scan. You can see the search progress and how many channels are found in the on-screen menu. After the scan is complete, the menu closes and your TV tunes to the first channel in the list.

**Note**

You can press **EXIT** to stop the search.

If you select **Cable/Satellite Box**, your TV will not scan for channels because the available channels are provided by the box. Press **EXIT** to close the menu.

## Hiding channels

You can hide channels in the channel list. When you press **CH ▲** or **CH ▼**, your TV will skip the hidden channels. You can still tune to a hidden channel by pressing the number buttons for the channel.

**To hide channels:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

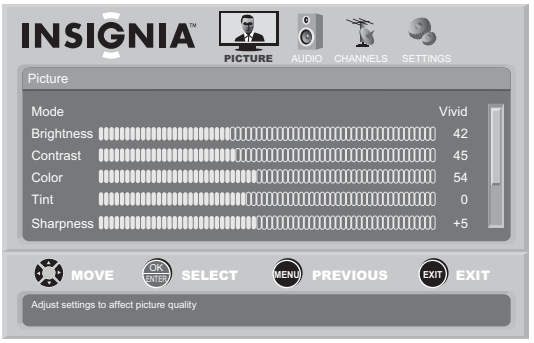


2 Press ◄ or ► to select **CHANNELS**. The *Channels* menu opens.

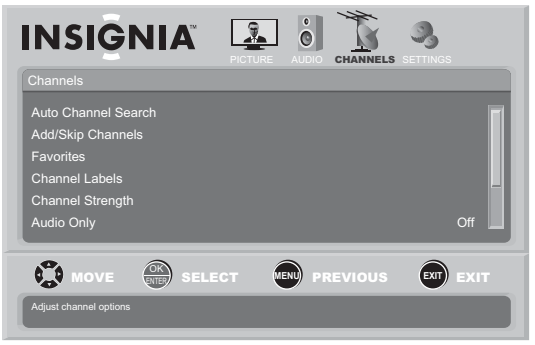


3 Press ▼ to highlight **Add/SKIP**, then press **OK/ENTER** or ► to open the *Channel Lists* screen.

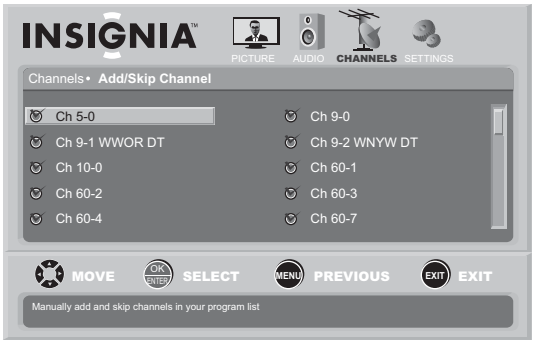


4 Press ◄ ► ▲ or ▼ to highlight the channel you want to hide, then press **OK/ENTER** to uncheck the highlighted channel. You can add a channel to the list by highlighting a channel and checking it.

5 Repeat Step 4 to hide additional channels.

6 Press **MENU** to return the previous menu, or press **EXIT** to close the menu.

**Note**

Depending on how many channels are in the channel list, you may need to press ▲ or ▼ to scroll to the next or previous page of channels.

## Setting up a favorite channel list

**To set up a favorite channel list:**

1. Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

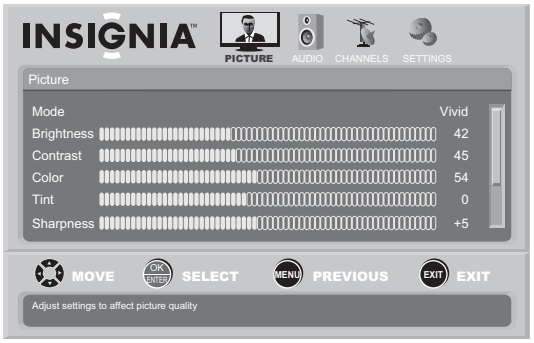


2. Press ◄ or ► to select **CHANNELS**. The *Channels* menu opens.

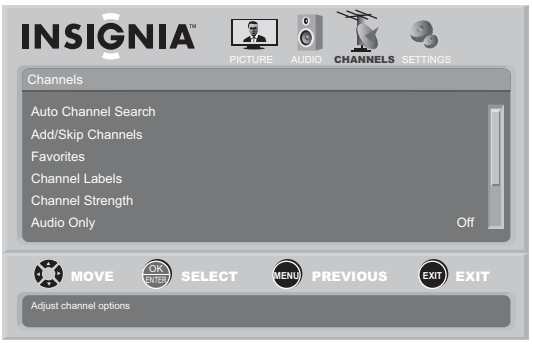


3. Press ▼ to highlight **Favorites**, then press **OK/ENTER** or ► to open the *Favorites* screen.

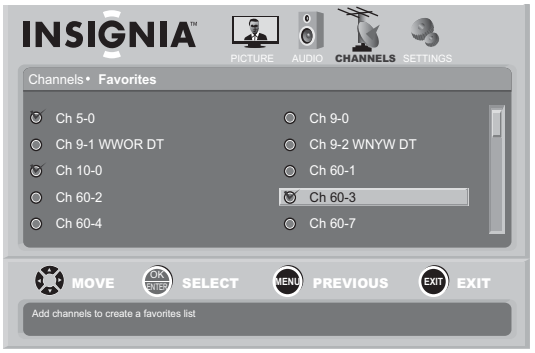


4. Press ◄ ► ▲ or ▼ to highlight the channel you want to add to the *Favorites* list, then press **OK/ENTER** to check the highlighted channel. You can remove a channel from the list by highlighting the channel and unchecking it.
5. Repeat Step 4 to add additional channels.
6. Press **MENU** to return the previous menu, or press **EXIT** to close menu.

**Note**

Depending on how many channels are in the *Favorites* list, you may need to press ▲ or ▼ to scroll to the next or previous page of channels.

## Viewing a favorite channel

**To view a favorite channel:**

1. Press **FAV** to open the *Favorites* list.

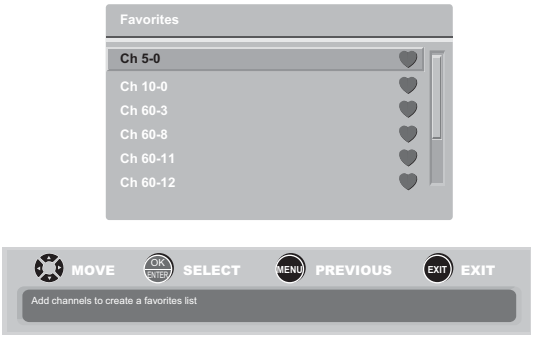


2. Press ▲ or ▼ to highlight the channel you want to watch, then press **OK/ENTER** to tune to the channel.
3. Press **EXIT** to close the *Favorites* list.

**Note**

Depending on how many channels are in the *Favorites* list, you may need to press ▲ or ▼ to scroll to the next or previous page of channels.

## Adding or changing a channel label

**To add or change a channel label:**

1. Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

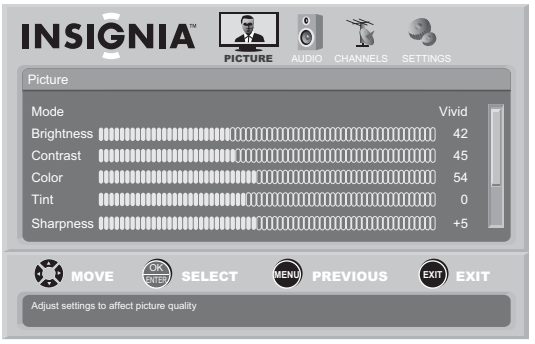


2. Press ◄ or ► to select **CHANNELS**. The *Channels* menu opens.

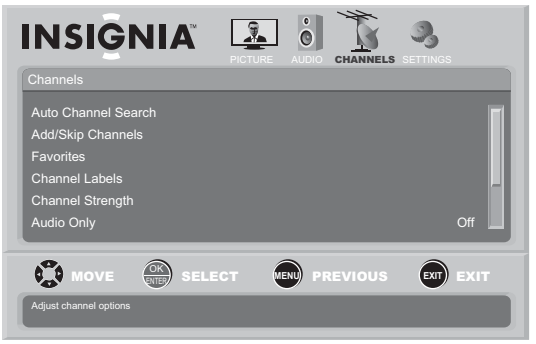

3 Press ▼ to highlight **Channel Labels**, then press **OK/ENTER** or ▶ to open the *Channel Labels* screen.

4 Press ▲ or ▼ to select the channel you want to add a label to or change the label for, then press ▶ to move the cursor to label selection field.

5 Press ▲ or ▼ to select a letter, then press ▶ to go to the next letter. Repeat this step to add additional letters. You can add as many as 11 letters.

6 Press **OK/ENTER** to confirm the label.

7 Press ◀ or ▶ to check **Yes** or **No**, then press **OK/ENTER** to confirm.

8 Press **MENU** to go to the previous menu, or press **EXIT** to close the menu.

## Checking the DTV signal strength

**To check the DTV signal strength:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

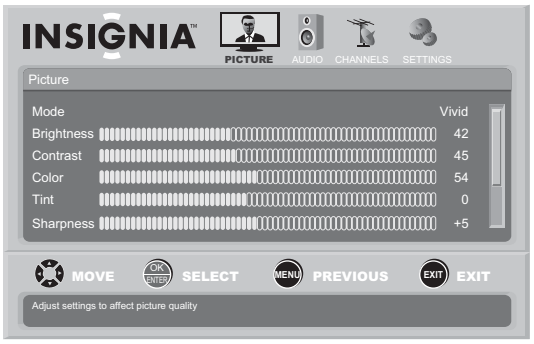


2 Press ◀ or ▶ to select **CHANNELS**. The *Channels* menu opens.

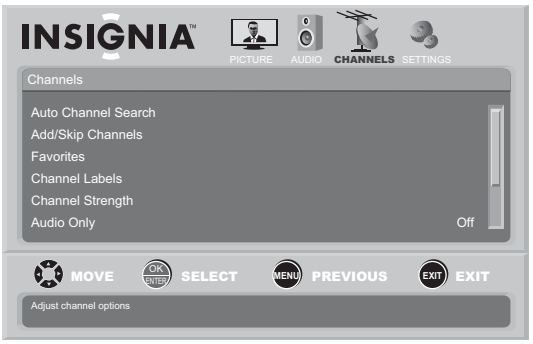


3 Press ▼ to highlight **Channel Strength**, then press **OK/ENTER** or ▶ to open the DTV signal meter.

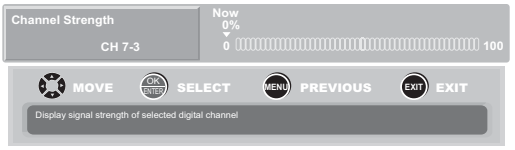


4 Press **MENU** to go to the previous menu, or press **EXIT** to close the menu.

**Note**

When you are tuned to a DTV channel, you can press **INFO** to see the DTV signal strength.

# Setting parental controls

**Note**

Unless otherwise noted, all tasks in this section are based on using the remote control.

## Setting or changing the password

Your TV has a V-chip that lets you control the type of programs your children can watch. Parental controls include two ratings: MPAA (based on age) and TV Parental Guidelines (based on content and age). A TV program may have an MPAA or TV Parental Guidelines rating, so you should set controls for both ratings.

Before you can select ratings, you need to set up a parental controls password.

**To set up a password:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

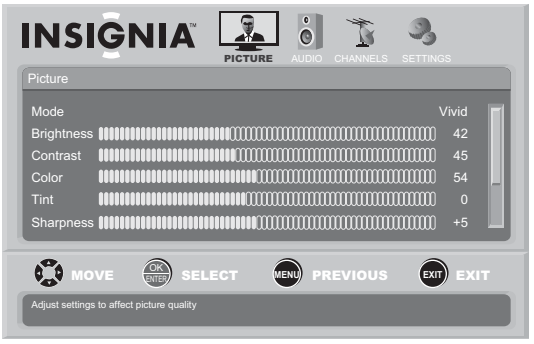


2 Press ◀ or ▶ to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Parental Controls**, then press **OK/ENTER** or ►. The *Enter Password* screen opens.

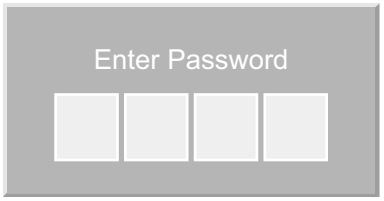


4 Press the number buttons to enter the password. If you have not set a password, enter **0000**. The *Parental Controls* menu opens.

5 Press ▲ or ▼ to highlight **Change Password**, then press **OK/ENTER** or ►. The *Enter New Password* screen opens.

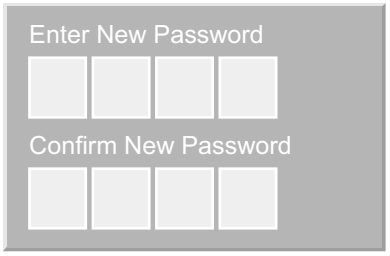


6 Press the number buttons to enter the new password, then enter the new password again.

**Note**

Write down your password and save it for future use. If you forget your password, enter **9999** as the password. This password always remains valid for resetting your password.

## Setting parental control levels

**To set parental control levels:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

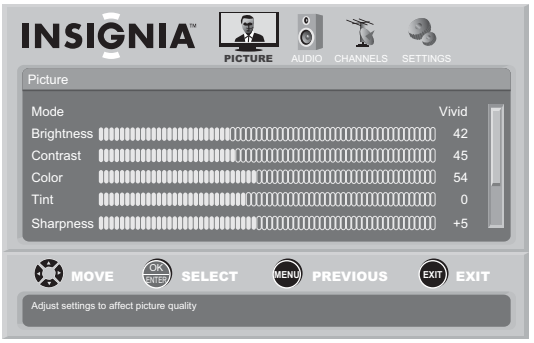


2 Press ◄ or ► to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Parental Controls**, then press **OK/ENTER** or ►. The *Enter Password* screen opens.

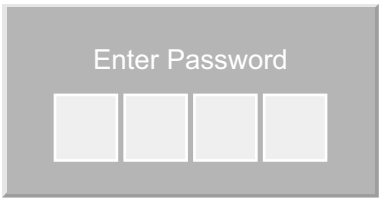


4 Press the number buttons to enter the password. If you have not set a password, enter **0000**. The *Parental Controls* menu opens.

5 Press ▲ or ▼ to highlight **USA Parental Locks** or **Canadian Parental Locks**, then press **OK/ENTER** or ► to open the *USA Parental Locks* or *Canadian Parental Locks* screen.

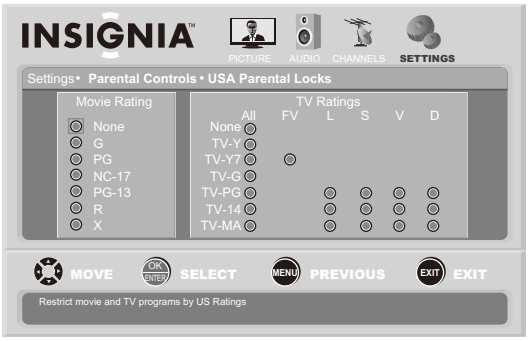


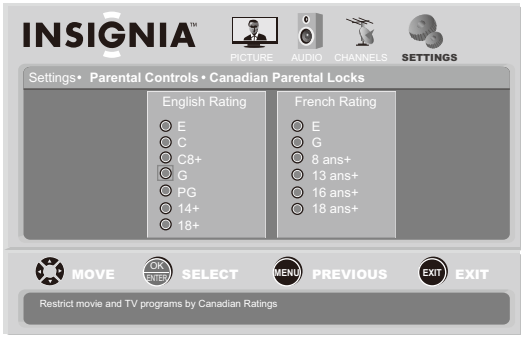


6 Press ◄ ► ▲ or ▼ to highlight a rating, then press **OK/ENTER** to block or unblock the rating. When you block a rating, that rating and all higher ratings are blocked.

7 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

**Note**

When you first set parental controls, they take effect immediately.

If you have set parental controls then tune to a blocked channel or program, you are prompted to enter the password. After you enter the password, parental controls are tuned off. You can press **P-LOCK** (or turn your TV off, then back on) to turn parental controls back on.

| U.S. TV ratings | |
|---|---|
| NONE | Not rated |
| TV-Y | All children |
| TV-Y7 | Children over seven years of age |
| TV-G | General audiences |
| TV-PG | Parental guidance suggested |
| TV-14 | Parents strongly cautioned |
| TV-MA | Mature audiences only |

Some of the age-based TV Parental Guidelines ratings also have content-based ratings.

| U.S. TV content ratings | |
|---|---|
| FV | Fantasy violence |
| L | Adult language. |
| S | Sexual situations. |
| V | Violence. |
| D | Sexually suggestive dialog. |

| U.S. movie (MPAA) ratings | |
|---|---|
| G | General audiences |
| PG | Parental guidance suggested |
| PG-13 | Suitable for children 13 and older |
| R | Parental guidance suggested for children under 17 |
| NC-17 | Not suitable for children under 17 |
| X | Adults only |
| N/A | Movie not rated. |

| Canadian English ratings | |
|---|---|
| E | Exempt programming |
| C | Children |
| C8+ | Children over 8 years old |
| G | General audiences |
| PG | Parental guidance |
| 14+ | Over 14 years old |
| 18+ | Adult programming |

| Canadian French ratings | |
|---|---|
| E | Exempt programming |
| G | General audiences |
| 8ans+ | Over 8 years old |
| 13ans+ | Over 13 years old |
| 16ans+ | Over 16 years old |
| 18ans+ | Over 18 years old, only for adult viewing |

## Blocking unrated TV

**To block unrated TV:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

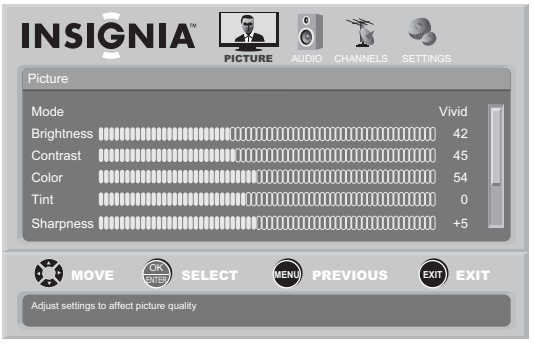

2 Press ◄ or ► to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Parental Controls**, then press **OK/ENTER** or ►. The *Enter Password* screen opens.

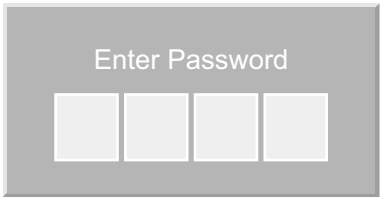


4 Press the number buttons to enter the password. If you have not set a password, enter **0000**. The *Parental Controls* menu opens.

5 Press ▼ to highlight **Block Unrated TV**, then press **OK/ENTER** or ► to access the sub-menu.

6 Press ▲ or ▼ to select **On (blocks unrated TV)** or **Off (does not block unrated TV)**.

7 Press **MENU** to go to the previous menu or **EXIT** to close the menu.

## Downloading rating information

**To download rating information:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

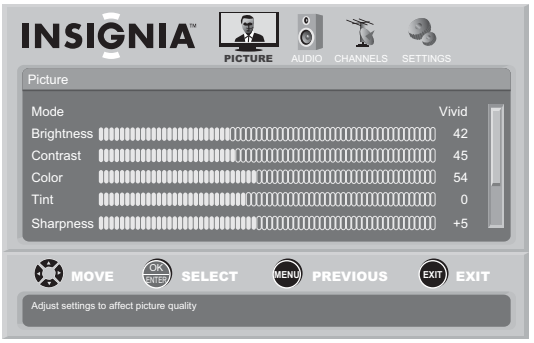


2 Press ◄ or ► to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Parental Controls**, then press **OK/ENTER** or ►. The *Enter Password* screen opens.

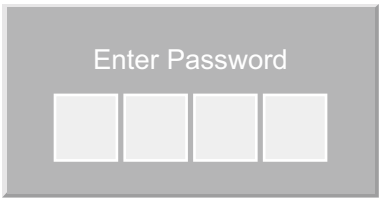


4 Press the number buttons to enter the password. If you have not set a password, enter **0000**. The *Parental Controls* menu opens.

5 Press ▲ or ▼ to scroll down the list of options and highlight **RRT5**.

6 Press **OK/ENTER** or ▶ to open the *RRT5* screen.

7 Press ▼ to highlight an option, then press **OK/ENTER** or ▶ to open the sub-menu.

8 Press ▲ or ▼ to select a rating.

9 Press **MENU** to go to the previous menu or **EXIT** to close the menu.

**Note**

If the program is broadcasted with RRT5 rating information, the information is downloaded automatically and can be used for parental controls.

If the program is not broadcasted with RRT5 rating information, no information is downloaded.

## Locking control buttons

You can lock the control buttons on the TV. When the buttons are locked, you can only operate the TV using the remote control.

**To lock control buttons:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

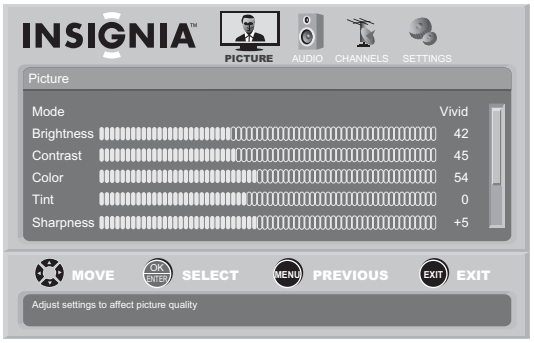


2 Press ◀ or ▶ to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Parental Controls**, then press **OK/ENTER** or ▶. The *Enter Password* screen opens.

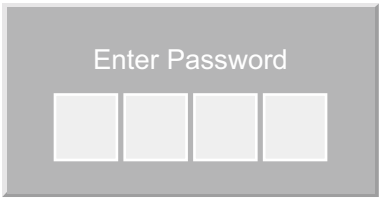


4 Press the number buttons to enter the password. If you have not set a password, enter **0000**. The *Parental Controls* menu opens.

5 Press ▼ to highlight **Button Lock**, then press **OK/ENTER** or ▶ to access the sub-menu.

6 Press ▲ or ▼ to select **On** or **Off**.

7 Press **MENU** to go to the previous menu or **EXIT** to close the menu.

# Using closed captioning

**Note**

Unless otherwise noted, all tasks in this section are based on using the remote control.

## Viewing closed captioning

**To view closed captions:**

- Press **CCD** to select **CC Off**, **CC On**, or **CC On When Mute**.

## Selecting the closed captioning mode

**To select the closed captioning mode:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

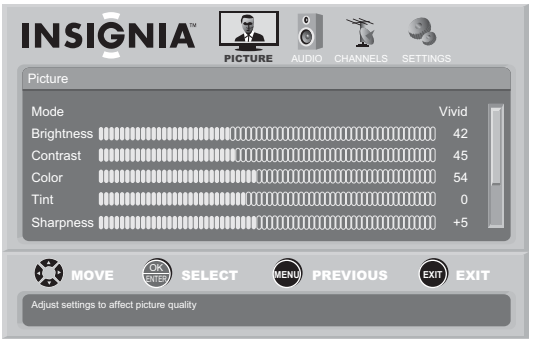

2 Press ◄ or ► to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Closed Caption**, then press **OK/ENTER** or ► to open the *Closed Caption* menu.

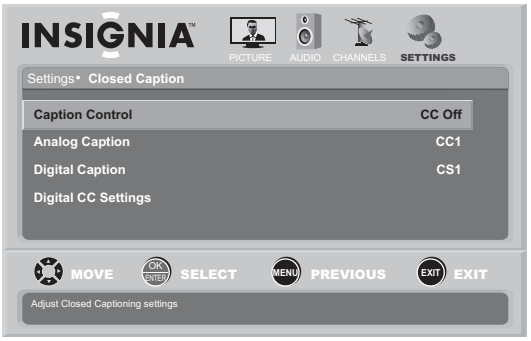


4 Press ▲ or ▼ to highlight **Analog Caption** or **Digital Caption**, then press **OK/ENTER** or ► to open the sub-menu.

5 Press ▲ ▼ ◄ or ► to select a setting.

6 Press **MENU** to go to the previous menu or **EXIT** to close the menu.

## Customizing DTV closed captioning styles

**To customize DTV closed captioning styles:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

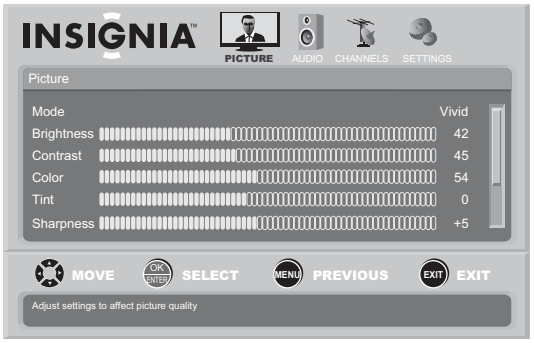


2 Press ◄ or ► to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Closed Caption**, then press **OK/ENTER** or ► to open the *Closed Caption* screen.

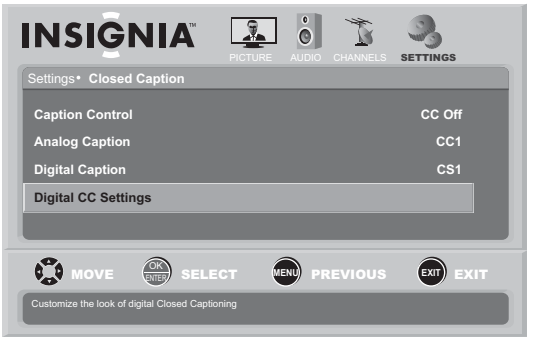


4 Press ▲ or ▼ to highlight **Digital CC Settings**, then press **OK/ENTER** or ► to open the *Digital CC Settings* menu.

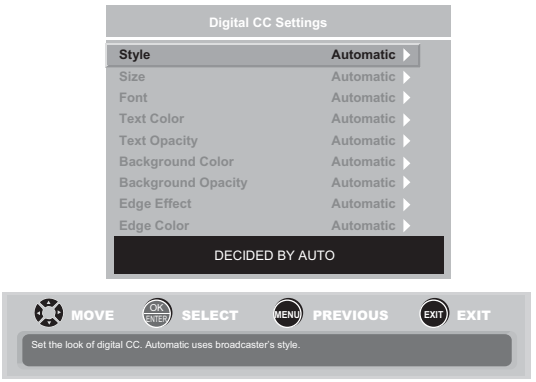


5 Press ▼ to highlight an option, then press ◄ or ► to adjust the option. You can select:

- **Style**—Selects the Digital Closed Caption style.
- **Size**—Selects the font size.
- **Font**—Selects the font type.
- **Text Color**—Selects the text color.
- **Text Opacity**—Selects the text opacity.
- **Background Color**—Selects the background color.
- **Background Opacity**—Selects the background opacity.
- **Edge Effect**—Selects the edge style.
- **Edge Color**—Selects the edge color.

6 Press ◄ or ► to adjust the option.

7 Press **MENU** to go to the previous menu or **EXIT** to close the menu.

**Note**

The default of **Digital CC Settings** is **Automatic**. All other settings will be available only when **Style** is set to **Custom**.

# Adjusting time settings

**Note**

Unless otherwise noted, all tasks in this section are based on using the remote control.

## Setting the clock

**To set the clock:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

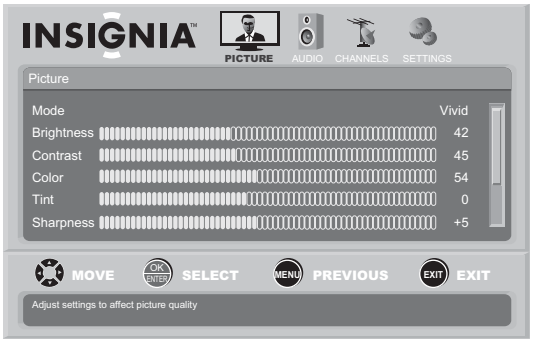


2 Press ◄ or ► to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Time**, then press **OK/ENTER** or ► to open the *Time* menu.

4 Press ▲ or ▼ to highlight **Date/Time**, then press **OK/ENTER** to open the *Date/Time* screen.

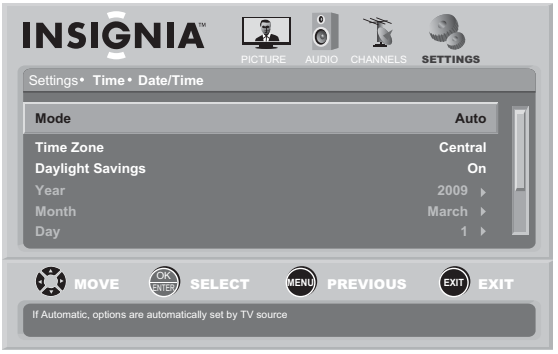


5 Press ▲ or ▼ to highlight the option you want to adjust, then press **OK/ENTER** or ► open the setting screen, or if the option has a ►, press ◄ or ► to adjust the setting.

6 Press **MENU** to go to the previous menu, or press **EXIT** to close the menu.

**Note**

If **Mode** is set to **Auto**, the date and time are set based on a time signal received from a DTV channel, and the only options you can adjust are **Time Zone** and **Daylight Savings**.

## Setting the sleep timer

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

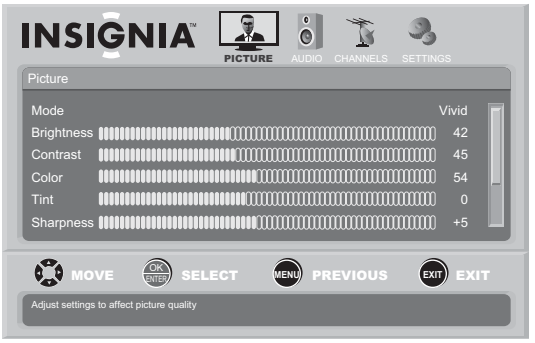


2 Press ◄ or ► to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Time**, then press **OK/ENTER** or ► to open the *Time* menu.

4 Press ▲ or ▼ to highlight **Sleep Timer**, then press **OK/ENTER** to open the sleep timer list.

5 Press ▲ or ▼ to select the amount of time you want your TV to wait before it automatically turns off.

6 Press **MENU** to go to the previous menu or **EXIT** to close the menu.

**Note**

You can also press **SLEEP** one or more times to set the sleep timer. You can select Off, 5, 10, 15, 30, 60, 90, 120, 180, or 240 minutes.

# Adjusting menu settings

**Note**

Unless otherwise noted, all tasks in this section are based on using the remote control.

## Selecting the menu language

**To select the menu language:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

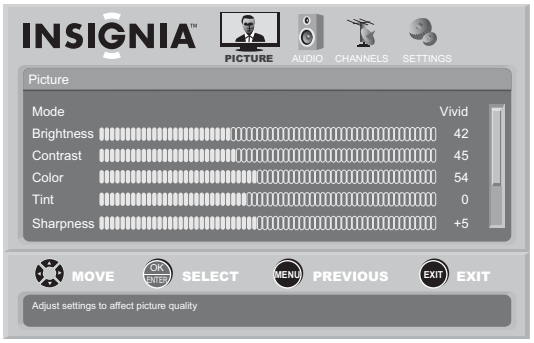


2 Press ◄ or ► to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Menu Settings**, then press **OK/ENTER** or ► to open the sub-menu.

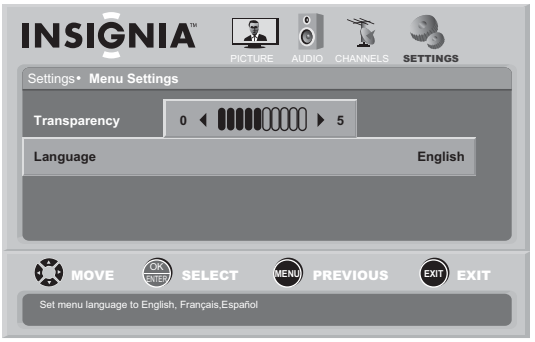


4 Press ▼ to highlight **Language**, then press **OK/ENTER** or ► to open the sub-menu.

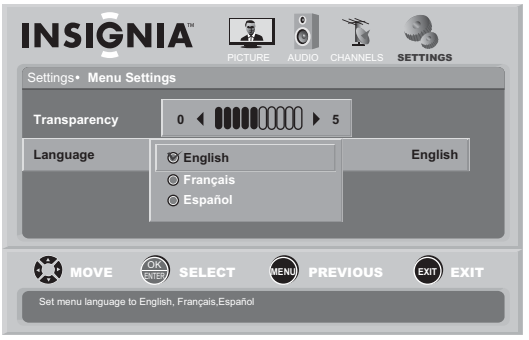


5 Press ▲ or ▼ to select a language.

6 Press **MENU** to go to the previous menu or press **EXIT** to close the menu.

## Changing the menu transparency

**To change the menu transparency:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

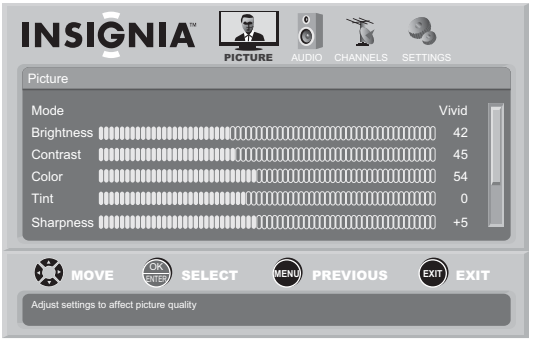

2 Press ◄ or ► to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Menu Settings**, then press **OK/ENTER** or ► to open the sub-menu.

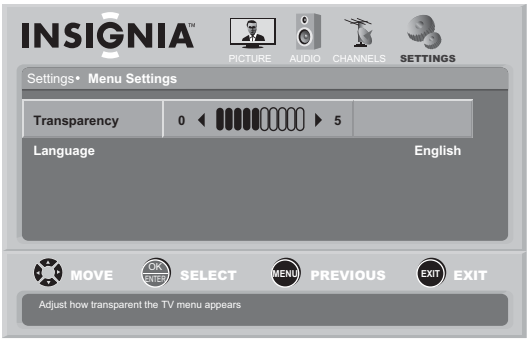


4 Press ▼ to highlight Transparency, ◄ or ► to change the transparency.

5 Press **MENU** to go to the previous menu or press **EXIT** to close the menu.

## Labeling an input source

**To change input labels:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

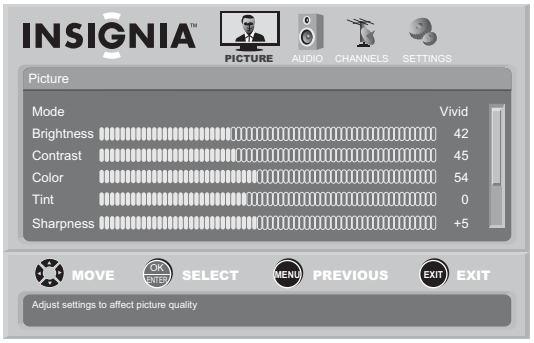


2 Press ◄ or ► to select **SETTINGS**. The *Settings* menu opens.

3 Press ▼ to highlight **Input labels**, then press **OK/ENTER** or ► to open the *Input Labels* screen.

4 Press ▲ or ▼ to select the input you want to change the label for (for example, **AV 1**).

5 Press ► to move the cursor to the label selection field.

6 Press ▲ or ▼ to select the label you want (**—**, **VCR**, **DVD**, **Set Top Box**, **Satellite**, **Cable Box**, **DVD/PVR**, **BD**, **HD**, **Game**, **Camcorder**, **Receiver**, **PC**, or **Other**), then press **OK/ENTER** to confirm the change.

7 Press ◄ or ► to check **Yes** or **No**, then press **OK/ENTER** to confirm.

8 To change another input label, press ◄ to move the cursor to the input selection field, then repeat step 4 to step 7.

9 Press **MENU** to go to previous menu or press **EXIT** to close the on-screen menu.

## Resetting settings to the defaults

**To reset settings to the defaults:**

1 Press **MENU**. The on-screen menu opens with the *Picture* menu displayed.

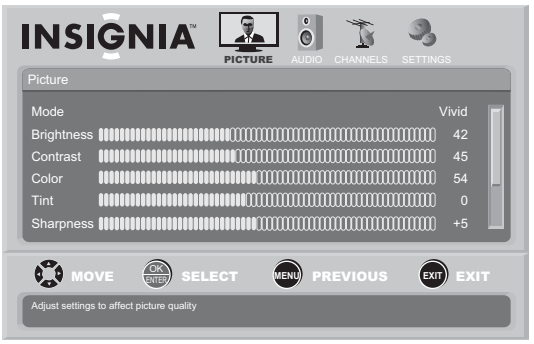

2 Press ◄ or ► to select **SETTINGS**. The *Settings* menu opens.

**Note**

You may need to scroll down to see the **Reset to Default** option.

3 Press ▼ to highlight **Reset to Default**, then press **OK/ENTER** to confirm.

4 Press **MENU** to go to the previous menu or press **EXIT** to close the menu.

# Programming your remote control

To program your remote to control home theater devices, follow these steps.

Before proceeding, find the codes for the devices you want to program in "Manufacturers' codes" on page 32 and write them down or highlight them.

**To program your remote control:**

1 Turn on the device (for example, a DVD player) and, if needed, load media such as a DVD.

2 Press the device key on the remote for the device that you want to program (**TV**, **DVD**, **STB**, or **AUX**).

3 Press and hold **SET** until the red LED blinks twice, then release.

4 Enter the first five-digit code for the device and brand that you wish to program. The LED blinks once as each digit is entered. If the code is valid, the LED blinks twice.

**Note**

If the LED does not blink twice, repeat steps 2 to 4 and try entering the code again.

5 Aim the remote at the device and press ⏻ (power). The device should turn off. If it does not, repeat Steps 3 through 5, trying each code for your brand until you find one that works. If you cannot find a code that works, see "Searching for your code" below.

6 Repeat Steps 1 to 5 for the other devices you want to control. For future reference, write down each working device code.

### *Searching for your code*

If your device does not respond to the remote control after trying all codes listed for your brand, or if your brand is not listed, try searching for your code.

**To search for your code:**

1 Turn on the device you want to control.

2 Press the desired device key (**TV**, **DVD**, **STB**, or **AUX**) once.

3 Press and hold **SET** until the red LED blinks twice, then release.

4 Enter **9 9 1**. The LED blinks twice.

5 Press the device group number for your device type (see table below).

- **0**—Cable (cable converters, video accessories, satellite receivers)
- **1**—TV (TVs)
- **2**—VCR (VCRs, DVD players)
- **3**—Audio (audio amplifiers, audio amps/tuners, CD players)

6 Aim the remote at the device and press ⏻ (power). The remote sends IR codes from its library to the selected device, starting with the most popular code first. If the device responds, go to Step 8.

7 If the device does not respond, press **CH** ▲ and the remote tests the next code for that device type. Continue to press **CH** ▲ until the device turns off.

**Note**

Press CH ▼ to try the previous code.

8 Now that you have found the correct code, press **SET** to save the code that worked for your device. The LED blinks twice to indicate that the code has been saved.

9 To search for other device codes, repeat Steps 1 to 8.

### *Checking the codes*

If you have set up the remote using the procedure in "Searching for your code" on page 29, you may need to find out which five-digit code is operating your equipment.

**To find out which code is assigned to your TV (for example):**

1 Press **TV** once.

2 Press and hold **SET** until the red LED blinks twice, then release.

3 Enter **9 9 0**. The LED blinks twice.

4 To view the code for the first digit, press **1**. Count the red LED blinks (for example, three blinks = 3), then write down the number in the appropriate code listing at the top of this column.

**Note**

If the LED does not blink, the code digit is 0.

5 Repeat Step 4 for the four remaining digits, using **2** for the second digit, **3** for the third digit, **4** for the fourth digit, and **5** for the fifth digit.

6 To check for other device codes, repeat Steps 1 through 5, substituting the device key for the device you would like to check.

### *Using learning*

This universal remote control includes a learning feature (some models may not include this) so you can add functions that are unique to your home entertainment devices (such as VCR Tracking Up or Down). However, there are some considerations to keep in mind.

**Precautions**

- Your original remote controls must be in working order for learning to work properly.
- Learned keys are mode-specific, so each one can store a unique function for each mode.
- Do not use the following keys for learning: **Device Keys**, **SET**, or ● (record).
- Learning capacity is approximately 42 to 75 keys, depending on the code being learned.
- Certain device functions are not learnable, including multi-frequency types, some high frequency functions, and other unusual formats.
- For optimum learning, avoid high levels of ambient light such as natural sunlight or energy-efficient fluorescent lights.

**Note**

Please have your original remote controls handy before programming learning.

### *Programming a learned key*

**To program a learned key:**

1 Place your Insignia remote control head-to-head (about 2" apart) from your original remote control (the one that came with the device). Also, locate the key (on your original remote control) that you want the Insignia remote control to learn. Press the mode key you wish to learn functions on.

2 Press and hold **SET** until the LED blinks twice, then release.

3 Enter **9 7 5**. The LED blinks twice.

**Note**

If more than 10 seconds pass between key presses, the remote exits programming.

If the LED displays one long flash instead, either your batteries are low, or the Insignia remote control has a memory fault. In either case, the remote cannot learn a new key.

4 Press the key on the remote you wish to program. The feedback LED stays lit for three seconds, indicating that the remote is ready to learn.

5 On the original remote, press and hold the key to be learned. Continue holding the key on the original remote until the Insignia's LED blinks twice.

**Note**

If the red LED displays one long blink, a learning error has occurred. Try repeating this step again until a successful capture occurs. If the function is still not captured, press and hold **SET** to exit programming and review the Precautions" above. If needed, also see "Troubleshooting remote control programming" on page 32. After reviewing, start programming again at Step 1.

6 Repeat Steps 4 and 5 to program another key. Once you have completed programming all the keys you want, press and hold **SET** until the LED blinks twice to save all data learned.

### *Deleting a single learning key*

This process returns the key to its original programming for the mode you select. You can also delete learned programming by teaching a different function to the key (see "Programming a Learned Key" above).

**Note**

If more than 10 seconds pass between key presses, the remote exits programming.

If the LED displays one long flash instead, either your batteries are low, or the Insignia remote control has a memory fault. In either case, the remote cannot learn a new key.

**To delete a single learned key:**

1 Press the mode key that you wish to remove the learned key from.

2 Press and hold **SET** until the LED blinks twice, then release.

3 Enter **9 7 6**. The LED blinks twice.

4 Press the key containing the learned function to be deleted, twice. The LED blinks twice and programming ends.

### *Deleting all learned keys in a specific mode*

**Note**

If more than 10 seconds pass between key presses, the remote exits programming.

If the LED displays one long flash instead, either your batteries are low, or the Insignia remote control has a memory fault. In either case, the remote cannot learn a new key.

**To delete all learned keys in a specific mode:**

1 Press and hold **SET** until the LED blinks twice, then release.

2 Press **9 7 6**. The LED blinks twice.

3 Press a mode key twice (for example, **TV**, **DVD**, **STB**, or **AUX**) to clear all the learned keys for that mode. The LED blinks twice and programming ends.

### *Changing volume lock*

The Insignia universal remote control comes preset to allow independent volume control of each selected device (global volume unlock). However, you may change the volume lock setting to global volume lock so that one device's volume controls volume in all other modes. After that, you can perform Individual volume unlock on a selected device to set its volume control for independent operation or global volume unlock to remove all volume locking.

**To lock volume control to one mode (global volume lock):**

1 Press and hold **SET** until the red LED blinks twice, then release.

2 Enter **9 9 3**, the LED blinks twice.

3 Press the mode key for the device you want to control (for example, TV).

4 The LED blinks twice. Now when you press **VOL+**, **VOL-**, or **Mute**, the selected device controls the volume regardless of the current mode.

**To unlock all volume control (restoring global unlock):**

1 Press and hold **SET** until the red LED blinks twice, then release.
2 Enter **9 9 3**, the LED blinks twice.
3 Press **VOL+**. The LED blinks four times. Volume is independently controlled for all programmed devices.

**To unlock a single device's volume control:**

1 Press the desired device mode key (**TV**, **DVD**, **STB**, or **AUX**).
2 Press and hold **SET** until the red LED blinks twice, then release.
3 Enter **9 9 3**. The LED blinks twice.
4 Press **VOL-**. The red LED blinks four times. Volume is independently controlled for the selected devices.

### *Programming channel lock*

Channel control can be locked so that the Insignia remote controls a single device's channel-changing functions, regardless of operating mode. This is often enabled by users who watch all broadcast TV through one device (for example, a cable set-top box). The affected keys are **1** through **0**, **CH ▲**, **CH ▼**, and **RECALL**.

**To lock all channel controls to one device:**

1 Press the mode key that relates to the device that you use for channel changing control.
2 Press and hold **SET** until the mode LED blinks twice, then release.
3 Enter **9 7 3**.The mode LED blinks twice.
4 Press **CH ▲** once. The mode LED blinks twice.

Now, regardless of what mode you select, the channel keys will only change channels on the assigned device.

**To unlock channel locks:**

1 Press and hold **SET** until the mode LED blinks twice, then release.
2 Enter **9 7 3**. The mode LED blinks twice.
3 Press **CH ▼** once. The mode LED blinks four times.

Now the channel functions will correlate to the active mode (for example, press **CH ▲** in TV mode and the TV changes channel accordingly).

### *Using keymover*

Your Insignia universal remote control includes a keymover feature that lets you map (or copy) keys from one mode (such as source mode) to another mode (such as destination mode) or to a different key in the same mode.

**Note**

Do not use any of the Device Keys, ⏻ (power), **RECORD**, or **SET** as a source or destination key.

**To move keys in the same device mode:**

1 Press the desired device key (**TV**, **DVD**, **STB**, or **AUX**).
2 Press and hold **SET** until the LED blinks twice, then release.
3 Press **9 9 4**. The LED blinks twice.
4 Press the key you want to move.
5 Press the new key that should perform the function. The LED blinks twice.
6 Repeat Steps 1-5 to move additional keys.

**To move keys to a different device mode:**

1 Press and hold **SET** until the LED blinks twice, then release.
2 Press **9 9 4**. The LED blinks twice.
3 Press the device key that contains the function you want to move (for example, **DVD**).
4 Press the key you want to move (such as **Play**).
5 Press the device key that you want to move the function to. (such as **TV**).
6 Press the key in the new mode that should perform the function (for example, **Play**). The LED blinks twice.
7 Repeat Steps 1-6 to move additional keys.

**To restore all keymoved data in a specific mode:**

1 Press and hold **SET** until the LED blinks twice, then release.
2 Press **9 9 4**. The LED blinks twice.
3 Press the device key you wish to remove all keymoved data from twice. The LED blinks twice.
4 Repeat for each device you want to restore.

**To restore original key function:**

1 Press the device key for which you wish to remove the keymoved data from a specific key.
2 Press and hold **SET** until the LED blinks twice, then release.
3 Enter **9 9 4**. The LED blinks twice.
4 Press the key you wish to remove the keymoved data from twice. The LED blinks twice.
5 Repeat Steps 1- 4 for additional keys you wish to remove.

### *Programming macros*

Your Insignia universal remote control includes the ability to program any key (other than the **SET** key) with a macro function. Each one can be set up to perform a pre-programmed set of sequential key presses with the press of a single key. A macro can be used to control a home theater operation, to set a favorite channel, or for other functions you would like to control with one key press. Each macro key can hold up to 15 key presses, total.

**Note**

Programming a new macro over an existing one erases the original macro.

**To program a mode-independent macro:**

1 Press and hold **SET** until the red LED blinks twice, then release.
2 Press **9 9 5**. The LED blinks twice.

3 Press the key you want to assign to a macro.

4 Enter the series of commands you want the macro to execute (up to 15 commands).

5 Press and hold **SET** until the red LED blinks twice, then release.

Now, when you press the preset macro key, the remote sends the series of commands you have entered, regardless of what mode you are in. For example, you could program a macro key to turn on both your TV and cable box and select a particular channel.

6 To clear the macro, repeat Steps 1-5, but do not enter a series of commands at Step 4.

**To program a mode-dependent macro:**

1 Press the device mode key (**TV**, **DVD**, **STB**, or **AUX**).

2 Press and hold **SET** until the LED blinks twice, then release.

3 Press **9 7 8**. The LED blinks twice.

4 Press the key you wish to assign to a macro.

5 Enter the series of commands you want the macro to execute (up to 15 commands).

6 Press and hold **SET** until the red LED blinks twice, then release.

Now, when you press the macro key, the remote sends the series of commands you have entered, but only if you are in the mode you selected in Step 1. For example, you could program the macro key to turn on both your TV and cable box and select a particular channel, but only if you are in TV mode. If you are in DVD mode, this key does not execute the macro you set up in TV mode.

7 To clear the macro, repeat Steps 1-6, but do not enter a series of commands at Step 5.

## Troubleshooting remote control programming

**Problem**: The LED does not blink when you press a key.

**Solution**: Try pressing different keys. Replace the batteries with two new AA batteries.

**Problem**: The LED blinks when you press a key, but the device does not respond.

**Solution**: Make sure that the remote control is aimed at your device and is not more than 40 feet away.

**Problem**: The LED blinks one long blink while in SET mode.

**Solution**: An entry error has occurred (for example, wrong key). Try entering the sequence again.

**Problem**: The remote control does not control devices or commands are not working properly.

**Solution**: Try all listed codes for the device. Make sure the device operates with an infrared remote control.

**Problem**: No volume on a device.

**Solution**: See "Changing volume lock" on page 30, and make sure that the volume is not locked to a different mode already.

**Problem**: Channels do not change correctly when directly entering digits to change channels.

**Solution**: If the original remote control required you to press **Enter** to change channels, press **Enter** on this remote after entering the channel number.

## Manufacturers' codes

### *Audio amplifiers*

| | |
|---|---|
| Adcom | 30577, 31100 |
| Anthem | 32220 |
| Bose | 30674 |
| Carver | 30892 |
| Durabrand | 31561 |
| Elan | 30647 |
| GE | 30078 |
| Harman/Kardon | 30892 |
| JVC | 30331 |
| Left Coast | 30892 |
| Lenoxx | 31561 |
| Marantz | 30892 |
| McIntosh | 30251 |
| Modulaire | 30395 |
| NEC | 30264 |
| Optimus | 30395, 30823 |
| Philips | 30892 |
| Pioneer | 30823 |
| Polk Audio | 30892 |
| RadioShack | 30395 |
| RCA | 30823 |
| Realistic | 30395 |
| Shure | 30264 |
| Sony | 30689, 30815 |
| Soundesign | 30078 |
| Victor | 30331 |
| Wards | 30078 |
| Yamaha | 30354, 30133 |

### *Audio accessories*

| | |
|---|---|
| Accurian | 31106 |
| Altec Lansing | 30607, 31056 |
| Apple | 31115 |
| Creative | 30872 |
| DLO | 31155 |
| GPX | 32113 |
| Griffin | 31891 |
| iDeck | 31106 |
| iHome | 32152 |
| iLive | 32113 |
| Imerge | 31491 |
| iPort | 31917 |
| Klipsch | 31339 |
| Marantz | 31491 |
| Memorex | 32119 |
| Monitor Audio | 31106 |
| Motorola | 31464 |
| Omnifi | 31605 |

| | |
|---|---|
| Roku | 31828 |
| Sonance | 31917 |
| Yamaha | 31809, 31810, 32021 |

### *Audio receivers*

| | |
|---|---|
| ADC | 30531 |
| Adcom | 30616 |
| Aiwa | 31405, 30189, 30121, 31089, 31388, 31641 |
| Akai | 30244, 31512 |
| Alco | 31390 |
| AMC | 31077 |
| Amphion Media Works | 31563 |
| AMW | 31563 |
| Anam | 31609, 31074 |
| Anthem | 31185 |
| Apex Digital | 31257, 31430, 31774 |
| Arcam | 31189 |
| Audiotronic | 31189 |
| Audiovox | 31390 |
| B & K | 30702, 30820, 30840 |
| BK | 30702 |
| Bose | 31229, 30639, 31253, 31629, 31841, 31933 |
| Cairn | 30189 |
| Cambridge Soundworks | 31370 |
| Capetronic | 30531 |
| Carver | 31189, 30189, 30121, 31089, 31289 |
| Coby | 31389 |
| Curtis Mathes | 30014 |
| Daewoo | 31250 |
| Denon | 31360, 30121, 31104, 31142, 31306, 32857 |
| Emerson | 30531 |
| Fisher | 31801 |
| Garrard | 30463 |
| Grundig | 30189 |
| Harman/Kardon | 30110, 30189, 30891, 31289, 31304, 31306, 32241 |
| Hitachi | 31273, 31801 |
| iLive | 32013 |
| Inkel | 30491 |
| Insignia | 31030, 31077, 31893, 32169, 32175 |
| Integra | 30135, 30842, 31298, 31320, 31805 |
| iSymphony | 32258 |
| JBL | 30110, 31306 |
| JVC | 31058, 30074, 31374, 31495, 31871, 32239 |
| Kawasaki | 31390 |
| Kenwood | 31313, 31570, 30077, 30186, 31027 |
| KLH | 31390, 31412, 31428 |
| Koss | 31366, 31497 |
| Lexicon | 31076 |
| LG | 31293, 32197 |
| Linn | 30189 |
| Liquid Video | 31497 |
| Magnavox | 31189, 31269, 30189, 30391, 30531, 31089, 31266,31514 |
| Marantz | 31189, 31269, 30189, 30891, 31089, 31289 |
| McIntosh | 31289 |
| Micromega | 31189, 30189 |
| Mitsubishi | 31393 |
| Musicmagic | 31089 |
| Myryad | 31189 |
| Nakamichi | 31313, 30097, 31555 |
| Norcent | 31389 |
| Nova | 31389 |
| Onkyo | 30135, 30842, 31298, 31320, 31531, 31805, 31905 |
| Optimus | 31023, 30074, 30014, 30121, 30186, 30531, 31074 |
| Oritron | 31366, 31497 |
| Outlaw | 30391 |
| Panasonic | 31308, 31518, 30367, 31275, 31288, 31316, 31548,31633, 31763, 31764 |
| Philips | 31189, 31269, 30189, 30391, 30891, 31089, 31266 |
| Pioneer | 31023, 30014, 30150, 30244, 30531, 30630, 31123,31384, 31935 |
| Polaroid | 31508 |
| Polk Audio | 30189, 31289 |
| Proscan | 31254 |
| RadioShack | 31609 |
| RCA | 31023, 31609, 31254, 30531, 31074, 31123, 31390,31511 |
| Realistic | 31609, 30121, 30186 |
| Revox | 30189 |
| Rio | 31869 |
| Samsung | 31295, 31304, 31500 |
| Sangean | 32165 |
| Sansui | 31189, 30189, 31089 |
| Sanyo | 31251, 31469, 31801 |
| Sharp | 30186, 31286 |
| Sharper Image | 31556 |
| Sherwood | 30491, 31077, 31653, 31905, 32169 |
| Sherwood | Newcastle 32169 |
| Sonic Blue | 31869 |
| Sonic Frontiers | 31185 |
| Sony | 31058, 31441, 31258, 31759, 31622, 30474, 31158,31406, 31558, 31658, 31758, 31822, 31858 |
| Stereophonics | 31023 |
| Sunfire | 31313 |
| Teac | 30463, 31074, 31390, 31528 |
| Technics | 31308, 31518, 31633 |
| Thorens | 31189 |
| Toshiba | 30135, 30842, 31123, 31788 |
| Venturer | 31390 |
| Victor | 30074 |
| Wards | 30189, 30014 |
| XM | 31406 |
| Yamaha | 31023, 30176, 30186, 30376, 31176, 31276, 31331,31375, 31376, 31476, 31815, 32061 |
| Zenith | 30857, 31293 |

### *Cable converters*

| | |
|---|---|
| A-Mark | 00008,00144 |
| ABC | 00237,00003,00008 |
| Accuphase | 00003 |
| Acorn | 00237 |

| | |
|---|---|
| Action | 00237 |
| Active | 00237 |
| ADB | 02586 |
| Americast | 00899 |
| Amino | 01602,01822 |
| Archer | 00237 |
| BCC | 00276 |
| Bell South | 00899 |
| British Telecom | 00003 |
| Century | 00008 |
| Cisco | 01877,00877,01982 |
| Clearmaster | 00883 |
| ClearMax | 00883 |
| Cool Box | 00883 |
| Coolmax | 00883 |
| Digeo | 01187, 02187 |
| Director | 00476 |
| Fosgate | 00276 |
| GE | 00144 |
| General Instrument | 00476,00810,00276,00003 |
| Gibralter | 00003 |
| GMI | 00883 |
| GoldStar | 00144 |
| Hamlin | 00009,00273 |
| Hitachi | 00003,00008, 00009 |
| i3 Micro | 01602 |
| Insight | 00476,00810 |
| Jerrold | 00476,00810, 00276, 00003 |
| Memorex | 00000 |
| Mitsubishi | 00003 |
| Motorola | 01376,00476, 00810, 00276, 01187, 01106, 01982 |
| Multitech | 00883 |
| Myrio | 01602,01822 |
| Nova Vision | 00008 |
| Novaplex | 00008 |
| Pace | 01877,00877,00237,00008,01982 |
| Panasonic | 00000,00008,00144,00107,01982 |
| Paragon | 00000,00008, 00525 |
| Penney | 00000 |
| Philips | 01305,00317 |
| Pioneer | 01877,00877, 00144, 00533 |
| Pulsar | 00000 |
| Quasar | 00000 |
| RadioShack | 00883 |
| RCA | 01256 |
| Regal | 00276,00279,00273 |
| Runco | 00000 |
| Samsung | 00003,00144,01982 |
| Scientific Atlanta | 01877,00877,00477,00237,00003,00000,00008,01982 |
| Sejin | 01602 |
| Sony | 01006 |
| Sprucer | 00144 |
| Starcom | 00003 |
| Supercable | 00276 |
| Supermax | 00883 |
| Thomson | 01256 |

### *Cable/PVR combos*

| | |
|---|---|
| Americast | 00899 |
| Amino | 01822 |
| Cisco | 01877, 01982 |
| Digeo | 01187, 02187 |
| General Instrument | 00810 |
| Jerrold | 00810 |
| Motorola | 01376, 00810, 01187, 01106, 01982 |
| Myrio | 01822 |
| Pace | 01877, 00237, 01982 |
| Pioneer | 01877 |
| RCA | 01256 |
| Scientific Atlanta | 01877, 01982 |
| Sony | 01006 |
| Supercable | 00276 |
| Thomson | 01256 |
| Zenith | 00899 |

### *CD players*

| | |
|---|---|
| Acoustic Research | 30420 |
| Aiwa | 30157 |
| Arcam | 30157 |
| Audio Research | 30157 |
| Burmester | 30420 |
| Cairn | 30157 |
| California Audio Labs | 30029 |
| Cambridge Soundworks | 30157 |
| Carver | 30157 |
| Curtis Mathes | 30032 |
| Denon | 30034 |
| DKK | 30000 |
| DMX Electronics | 30157 |
| Fisher | 30000 |
| Garrard | 30393,30420 |
| Genexxa | 30032 |
| Grundig | 30157 |
| Hafler | 30173 |
| Harman/Kardon | 30100,30157,30173 |
| Hitachi | 30032 |
| Inkel | 30157,30180 |
| Integra | 30101 |
| JVC | 30032,30072 |
| Kenwood | 30626,30000,30029,30028,30190 |
| KLH | 31318,31711 |
| Krell | 30157 |
| Linn | 30157 |
| Magnavox | 30157,30038,30274 |
| Marantz | 30626,30029,30157,30038,30180,30435 |
| Matsui | 30157 |
| McIntosh | 30256,30290,30660 |
| MCS | 30029 |
| Memorex | 30000, 30032,30420 |
| Micromega | 30157 |
| Miro | 30000 |
| Mission | 30157 |
| Modulaire | 30000,30032,30087,30180,30420 |
| MTC | 30420 |

| | |
|---|---|
| Myryad | 30157 |
| NSM | 30157 |
| Onkyo | 31327,30101 |
| Optimus | 30000,30032,30087,30393,30420 |
| Panasonic | 30029,30388,30752 |
| Parasound | 30420 |
| Penney | 30029 |
| Philips | 30626,30157,30274 |
| Pioneer | 31062,30032,31087 |
| Polk Audio | 30157 |
| Proceed | 30420 |
| Proton | 30157 |
| QED | 30157 |
| Quad | 30157 |
| Quasar | 30029 |
| RadioShack | 30000,30032,30180,30420 |
| RCA | 31062, 30032,30053,30420 |
| Realistic | 30000,30032,30087,30180,30420 |
| Revox | 30157 |
| Roksan | 30435 |
| Rotel | 30157,30420 |
| SAE | 30157 |
| Sansui | 30000,30157 |
| Sanyo | 30000,30087 |
| Sharp | 30180 |
| Sherwood | 30180 |
| Sonic Frontiers | 30157 |
| Sony | 30490,30000,30100,31364,30185 |
| Sugden | 30157 |
| Sylvania | 30157 |
| Symphonic | 30180 |
| TAG McLaren | 30157 |
| Tandy | 30032 |
| Tascam | 30393,30420 |
| Teac | 30490,30180,30393,30420 |
| Technics | 30029 |
| Thule Audio | 30157 |
| Victor | 30072 |
| Wards | 30032,30157,30053,30087 |
| Yamaha | 30490,30036,31292 |
| Yorx | 30000 |

### *DVD players*

| | |
|---|---|
| 3D LAB | 20503, 20539 |
| Accurian | 20675, 21072, 21416 |
| Advent | 21016 |
| Afreey | 20698 |
| Aiwa | 20641 |
| Akai | 20695, 20705, 20770, 20899, 21089 |
| Alba | 20672, 20717 |
| Alco | 20790 |
| Allegro | 20869 |
| Amphion Media Works | 20872 |
| AMW | 20872 |
| Apex Digital | 20533, 20672, 20717, 20755, 20794, 20796, 20797, 20830, 21004, 21020, 21056, 21061, 21100 |
| Arrgo | 21023 |
| Aspire Digital | 21168, 21407 |
| Astar | 21489 |
| Audiovox | 20717, 20790, 21041, 21071, 21072, 21121, 21122 |
| Axion | 21071, 21072 |
| B & K | 20655, 20662 |
| BBK | 21224 |
| Bel Canto Design | 21571 |
| Blaupunkt | 20717 |
| Blue Parade | 20571 |
| Blue Sky | 20695 |
| Bose | 21895, 22023 |
| Brandt | 20651 |
| Broksonic | 20695, 20868 |
| California Audio Labs | 20490 |
| Celestial | 21020 |
| Centrex | 20672, 21004 |
| Cinea | 20831 |
| CineVision | 20876, 20833, 20869 |
| Citizen | 21003, 20695, 21277 |
| Clairtone | 20571 |
| Coby | 20778, 21077, 21086, 21107, 21177 |
| Craig | 20831 |
| Creative | 20503, 20539 |
| Curtis Mathes | 21087 |
| CyberHome | 20816, 20874, 21023, 21024, 21117, 21129, 21502, 21537 |
| Cytron | 20705 |
| Daewoo | 20784, 20705, 20770, 20833, 20869, 21169, 21172, 21234, 21242 |
| Dansai | 20770 |
| Daytek | 20872 |
| Decca | 20770 |
| Denon | 20490, 20634, 22258 |
| Denver | 20778 |
| Desay | 21407 |
| DigitalMax | 21738 |
| Digitrex | 20672 |
| Disney | 20675, 21270 |
| DiViDo | 20705 |
| Dual | 20675, 21068, 21085 |
| Durabrand | 21127 |
| DVD2000 | 20521 |
| Electrohome | 21003 |
| Emerson | 20591, 20675, 20821, 21268 |
| Enterprise | 20591 |
| Entivo | 20503, 20539 |
| Enzer | 20770 |
| ESA | 20821, 21268 |
| Firstline | 20651 |
| Fisher | 20670 |
| Funai | 20675, 21268, 21334 |
| Gateway | 21073, 21077, 21158 |
| GE | 20522, 20815, 20717 |
| Go Video | 20573, 20744, 20717, 20715, 20741, 20783, 20833, 20869, 21044, 21075, 21099, 21158, 21304, 21730 |
| Go Vision | 21071, 21072 |

| | |
|---|---|
| GoldStar | 20741, 20869 |
| Goodmans | 20790 |
| Gradiente | 20490, 20651 |
| Greenhill | 20717 |
| Grundig | 20539, 20705 |
| Harman/Kardon | 20582, 20702 |
| Hello Kitty | 20831 |
| Hitachi | 20573, 20664, 21247 |
| Hiteker | 20672 |
| Humax | 21500, 21588 |
| iLo | 21348 |
| Initial | 20717 |
| Insignia | 21268 |
| Integra | 20571, 20627, 21769 |
| IRT | 20783 |
| JBL | 20702 |
| Jensen | 21016 |
| JMB | 20695 |
| JVC | 20558, 20623, 20867, 21164, 21275, 21550 |
| Kawasaki | 20790 |
| Kenwood | 20490, 20534 |
| KLH | 20717, 20790, 21020, 21149 |
| Kloss | 20533 |
| Koss | 20651, 21061 |
| Lasonic | 20627, 20798 |
| Lecson | 21533 |
| Lenoxx 21127 | |
| LG | 20591, 20741, 20869 |
| LiteOn | 21058, 21158, 21416, 21440, 21656, 21738 |
| Loewe | 20511, 20741 |
| Logix | 20783 |
| Magnasonic | 20651, 20675 |
| Magnavox | 20503, 20539, 20646, 20675, 20821, 21268, 21354, 21506 |
| Marantz | 20503, 20539, 20675 |
| McIntosh | 21533, 21273 |
| Medion | 20651 |
| Memorex | 20695, 20831, 21270 |
| Microsoft | 20522, 22083 |
| Minato | 20752 |
| Mintek | 20839, 20717 |
| Mitsubishi | 21521, 20521 |
| NAD | 20741 |
| Naiko | 20770 |
| NEC | 20785, 20869 |
| Nesa | 20717 |
| NexxTech | 21402 |
| Norcent | 21003, 20872, 21107, 21265 |
| Onkyo | 20503, 20627, 21769 |
| Oppo | 20575, 21224 |
| Optimus | 20571 |
| Oritron | 20651 |
| Palsonic | 20672 |
| Panasonic | 20503, 20490, 20571, 20632, 20703, 21362, 21462, 21490, 21641, 21762 |
| Philco | 20675 |
| Philips | 20503, 20539, 20646, 20675, 20854, 21260, 21267, 21340, 21354, 22056, 22084 |
| PianoDisc | 21024 |

| | |
|---|---|
| Pioneer | 20525, 20571, 20142, 20631, 20632, 21460, 21512, 21571 |
| Polaroid | 21020, 21061, 21086 |
| Polk Audio | 20539 |
| Portland | 20770 |
| Presidian | 20675, 21072, 21738 |
| Prima | 21016 |
| Proceed | 20672 |
| Proscan | 20522 |
| ProVision | 20778 |
| Qwestar | 20651 |
| Radionette | 20741 |
| RadioShack | 20571 |
| RCA | 20522, 20571, 20717, 20790, 20822, 21022, 21132, 21769 |
| Realistic | 20571 |
| Reoc | 20752 |
| Rio | 20869 |
| Rotel | 20623, 21178 |
| Rowa | 20823, 21004 |
| Saba | 20651 |
| Sampo | 20698, 20752 |
| Samsung | 20490, 20573, 20744, 20199, 20820, 20899, 21044, 21075 |
| Sansui | 20695 |
| Sanyo | 20670, 20675, 20695, 20873, 21334 |
| Schneider | 20783 |
| Schwaiger | 20752 |
| Sensory Science | 21158 |
| Sharp | 20630, 20675, 20752, 21256, 22250 |
| Sharper Image | 21117 |
| Sherwood | 20770, 21043, 21077 |
| Sherwood Newcastle | 21077 |
| Shinsonic | 20533, 20839 |
| Slim Art | 20784 |
| Sonic Blue | 20573, 20715, 20783, 20869, 21099 |
| Sony | 20533, 21533, 20864, 21033, 21070, 21431, 21516 |
| Sova | 21122 |
| Superscan | 20821 |
| SVA | 20717 |
| Sylvania | 20675, 20821, 21268 |
| Symphonic | 20675, 20821, 21268, 21334 |
| Tatung | 20770 |
| Teac | 20571, 20717, 20790 |
| Technics | 20490, 20703 |
| Technika | 20770 |
| Terapin | 21031 |
| Tevion | 20651 |
| Theta Digital | 20571 |
| Thomson | 20522, 20511 |
| Tivo | 21503, 21512, 21588 |
| Toshiba | 20503, 20573, 20539, 20695, 21045, 21154, 21503, 21510, 21588, 21769 |
| Unimax | 20770 |
| Universum | 20591 |
| Urban Concepts | 20503, 20539 |
| US Logic | 20839 |
| V | 21064, 21226 |

| | |
|---|---|
| Venturer | 20790 |
| Vizio | 21064, 21226 |
| Xbox | 20522, 22083 |
| Yamaha | 20490, 20539, 20545 |
| Yamakawa | 20872 |
| Zenith | 20503, 20591, 20741, 20869 |
| Zeus | 20784 |
| Zoece | 21265 |

### *DVD players (Blu Ray and HD-DVD)*

| | |
|---|---|
| Denon | 22258 |
| Integra | 21769 |
| LG | 20741 |
| Microsoft | 22083 |
| Onkyo | 21769 |
| Panasonic | 21641 |
| Philips | 22084 |
| Pioneer | 20142 |
| RCA | 21769 |
| Samsung | 20199 |
| Sharp | 22250 |
| Sony | 21516 |
| Toshiba | 21769 |
| Xbox | 22083 |

### *DVD/PVR combos controlled by the DVD*

| | |
|---|---|
| Go Video | 21730 |
| Humax | 21500, 21588 |
| LG | 20741 |
| Panasonic | 20490 |
| Philips | 21340 |
| Pioneer | 20631, 21512 |
| RCA | 20522 |
| Sharp | 21256 |
| Sony | 21033, 21070 |
| Sylvania | 20675 |
| Tivo | 21512 |
| Toshiba | 21503, 21510, 21588 |

### *Home automation*

| | |
|---|---|
| Accutek | 31215 |
| Amana | 31716 |
| Bionaire | 30846, 31215, 31861 |
| Da-Lite | 31794 |
| Draper | 32190 |
| Frigidaire | 31333 |
| GE | 30240 |
| GoldStar | 31537 |
| Holmes | 31215 |
| Kenmore | 31537 |
| Lasko | 30846, 31890 |
| LG | 31537 |
| Lightolier | 30184 |
| Lutron | 30597, 30318, 31239, 31597 |
| Marmitek | 30167 |
| One For All | 30167 |
| PCS | 30184 |
| RadioShack | 30240 |
| Screen Research | 32097 |
| Security System | 30167 |
| Sharper Image | 30846 |
| SmartLinc | 30184 |
| Universal | 30167 |
| Universal X10 | 30167 |
| Whirlpool | 31332 |
| Windmere | 31215 |
| X10 | 30167 |

### *DVR/PVR Systems for satellite receivers*

| | |
|---|---|
| AlphaStar | 00772 |
| Bell ExpressVu | 00775, 01170 |
| Chaparral | 00216 |
| Coolsat | 01806 |
| Crossdigital | 01109 |
| DirecTV | 01377, 00392, 00566, 00639, 01639, 01142, 00247, 00749, 01749, 00819, 01856, 01076, 01108, 00099, 01109, 01392, 01414, 01442, 01443, 01444, 01609, 01640 |
| Dish Network System | 01505, 00775, 01170, 01775 |
| Dishpro | 01505, 00775, 01775 |
| Echostar | 01505, 00775, 01170, 01775 |
| Expressvu | 00775, 01775 |
| Fortec Star | 01821 |
| Funai | 01377 |
| GE | 00392, 00566 |
| General Instrument | 00869 |
| GOI | 00775, 01775 |
| Hitachi | 00749, 00819 |
| Houston | 00775 |
| HTS | 00775, 01775 |
| Hughes Network Systems | 01142, 00749, 01749, 01442, 01443, 01444 |
| Humax | 01790 |
| Innova | 00099 |
| Jerrold | 00869 |
| JVC | 00775, 01170, 01775 |
| LG | 01226, 01414 |
| Magnavox | 00722 |
| McIntosh | 00869 |
| Mitsubishi | 00749 |
| Motorola | 00869 |
| Netsat | 00099 |
| Next Level | 00869 |
| Panasonic | 00247, 00701 |
| Pansat | 01807 |
| Philips | 01142, 00749, 01749, 00775, 00819, 01076, 00722, 00099, 01442 |
| Primestar | 00869 |
| Proscan | 00392, 00566 |
| RadioShack | 00566, 00775, 00869 |
| RCA | 00392, 00566, 01142, 00775, 00855, 00143, 01392, 01442 |
| Samsung | 01377, 01142, 01276, 01108, 01109, 01442, 01609 |

| | |
|---|---|
| SKY | 00099 |
| Sony | 00639, 01639, 01640 |
| Star Choice | 00869 |
| Star Trak | 00772, 00869 |
| Thomson | 00392, 00566 |
| Tivo | 01142, 01442, 01443, 01444 |
| Toshiba | 00749, 01749, 00790, 01285 |
| UltimateTV | 01392, 01640 |
| Ultrasat | 01806 |
| Uniden | 00722 |
| Voom | 00869 |
| Zenith | 01856 |

***TVs***

| | |
|---|---|
| A-Mark | 10047, 10054 |
| Accurian | 11803 |
| Accuscan | 10047 |
| Action | 10030, 10873 |
| Admiral | 10047, 10054, 10017, 10051, 10093, 10463, 10180 |
| Advent | 10761, 10783, 10815, 10817, 10842 |
| Adventuri | 10000 |
| Agna | 10150 |
| Aiko | 10092 |
| Akai | 10060, 10812, 10702, 10030, 10145, 10056, 10672, 11675, 11676, 11935 |
| Albatron | 10700, 10843 |
| Alfide | 10672 |
| Alleron | 10030 |
| Ambassador | 10150, 10177 |
| America Action | 10180 |
| American High | 10000, 10060 |
| Ampro | 10751 |
| Amstrad | 10171, 10177 |
| Amtron | 10000, 10180 |
| Anam | 10180 |
| AOC | 10180, 10030, 11365 |
| Aomni | 11623 |
| Apex Digital | 10156, 10748, 10879, 10765, 10767, 10890, 11217 |
| Astar | 11531, 11738 |
| Audinac | 10180 |
| Audiovox | 10451, 10180, 10092, 10623, 10802, 10846, 10875, 11937, 11951, 11952 |
| Aventura | 10171 |
| Axion | 11937 |
| Baysonic | 10180 |
| Beaumark | 10017, 10178, 10030 |
| Belcor | 10030 |
| Bell & Howell | 10054, 10154, 10093 |
| BenQ | 11032, 11212, 11315 |
| Boxlight | 10893 |
| Bradford | 10180 |
| Brockwood | 10178, 10030, 10056 |
| Broksonic | 10236, 10463, 10180, 10177, 11935 |
| Byd:sign | 11309 |
| Candle | 10030, 10056 |
| Capehart | 10017, 10178, 10030, 10092 |
| Carnivale | 10030 |
| Carver | 10054 |
| Celebrity | 10000 |
| Celera | 10765 |
| Changhong | 10156, 10765, 10767, 10783 |
| Cineral | 10451, 10092 |
| Citek | 10047 |
| Citizen | 10054, 10000, 10451, 10463, 10180, 10060, 10030, 10171, 10092, 10056, 11935 |
| Clarion | 10180 |
| Classic | 10030, 10092, 10056 |
| Colortyme | 10047, 10054, 10017, 10060, 10178, 10030 |
| Commercial Solutions | 11447, 10047 |
| Concerto | 10056 |
| Conic | 10178 |
| Contec | 10180 |
| Craig | 10180, 10171 |
| Crosley | 10054, 10000, 10180, 10030, 10171 |
| Crown | 10093, 10180, 10056, 10672 |
| Crown Mustang | 10672 |
| Curtis Mathes | 10047, 10054, 10154, 10000, 10051, 10451, 10093, 10180, 10060, 10702, 10178, 10030, 10145, 10166, 10056, 10466, 11147, 11347 |
| CXC | 10180 |
| Cytron | 11326 |
| Daewoo | 10451, 10178, 10092, 11661, 11756, 10623, 10661, 10672, 11755 |
| Dayton | 10092 |
| Daytron | 10178, 10030, 10092, 10056 |
| Dell | 11080, 11178, 11264, 11403, 11863 |
| Denon | 10145 |
| Digital Life | 10872 |
| Dream Vision | 11164 |
| Dumont | 10017, 10180, 10178 |
| Durabrand | 10463, 10180, 10178, 10171, 11034 |
| Dwin | 10093, 10720, 10774 |
| Dynex | 11463, 11780, 11785, 11810 |
| Eaton | 10060 |
| Electroband | 10000 |
| Electrograph | 11623, 11755 |
| Electrohome | 10154, 10000, 10463, 10150, 10178, 10030, 10056 |
| Emerald | 10178, 10177 |
| Emerson | 10047, 10154, 10451, 10236, 10463, 10180, 10150, 10178, 10171, 10177, 10623, 11394, 11963 |
| Emprex | 11422 |
| Envision | 10030, 10813, 11365 |
| Epson | 10833, 10840 |
| ESA | 10812, 10171, 11963 |
| Fisher | 10054, 10154, 10000 |
| Fortress | 10093 |
| Fujitsu | 10683, 10809, 10853 |
| Funai | 10000, 10180, 10171, 11271, 11963 |
| Futuretech | 10180 |
| Gateway | 11756, 11755 |
| GE | 11447, 10047, 10000, 10051, 10451, 10060, 10178, 10030, 11147, 11347 |
| Gemini | 10047 |
| Gibralter | 10017, 10000, 10030 |

| | |
|---|---|
| Go Video | 10886 |
| Go Vision | 11937 |
| GoldStar | 10047, 10054, 10178, 10030, 10056, 11154 |
| Gradiente | 10053, 10056 |
| Grundig | 10706, 10672, 10683 |
| Grundy | 10180 |
| Grunpy | 10180 |
| Haier | 11034 |
| Hallmark | 10236, 10180, 10178 |
| Hannspree | 11348, 11351, 11745 |
| Harley Davidson | 10000, 10180, 10060, 10178, 10030 |
| Harman/Kardon | 10054 |
| Harvard | 10180 |
| Havermy | 10093 |
| Heathkit | 10017 |
| Helios | 10865 |
| Hello Kitty | 10451 |
| Hewlett Packard | 11494, 11502, 11642 |
| Hisense | 10748 |
| Hitachi | 10047, 10054, 10017, 10000, 10051, 11145, 10145, 10056, 11445, 11643 |
| HP | 11494, 11502, 11642 |
| Hyundai | 10849, 10865, 11219, 11294 |
| iLo | 11286, 11603, 11684, 11990 |
| Ima | 10236, 10180, 10178 |
| Infinity | 10054 |
| InFocus | 11164 |
| Initial | 11603, 11990 |
| Insignia | 10171, 11204, 11326, 11517, 11564, 11641, 11710, 11780, 11963, 12002 |
| Inteq | 10017, 10145 |
| JBL | 10054 |
| JCB | 10000 |
| Jensen | 10761, 10815, 10817 |
| JIL | 10030 |
| Jutan | 10030 |
| JVC | 10054, 10053, 10030, 10650, 10731, 11253, 11774 |
| Kamp | 10017, 10180 |
| Kawasho | 10030 |
| KEC | 10180, 10060 |
| Kenwood | 10180, 10030 |
| KLH | 10156, 10180, 10765, 10767 |
| Kloss | 10030 |
| Konka | 10180, 10720 |
| KTV | 10463, 10180, 10030 |
| Lark | 10154 |
| LG | 10054, 11265, 10060, 10178, 10030, 10056, 10700, 10856, 11154, 11178, 11423, 11993 |
| Lloyd's | 10236, 10180, 10030, 10056 |
| Logik | 10236, 10180, 10056 |
| Luxman | 10056 |
| LXI | 10047, 10054, 10017, 10154, 10000, 10156, 10051, 10093, 10060, 10053, 10178, 10030, 10171, 10166, 10056 |
| Magnasonic | 10054, 10000, 10156, 10093, 10030, 10092, 10056 |
| Magnavox | 10047, 11454, 10054, 10154, 10000, 10250, 10051, 10180, 10060, 10030, 10171, 10092, 10706, 10802, 11198, 11254, 11365, 11755, 11866, 11963, 11990 |

| | |
|---|---|
| Majestic | 10017 |
| Marantz | 11454, 10054, 10030, 10704, 10855, 11154, 11398 |
| Matsui | 10056, 10177 |
| Matsushita | 10250, 10051, 10650 |
| Maxent | 11756, 10762, 11211, 11714, 11755, 11757 |
| Megapower | 10700 |
| Megatron | 10047, 10178, 10145, 10056 |
| Memorex | 10154, 10463, 10180, 10150, 10178, 10030, 10056 |
| MGA | 10150, 10178, 10030 |
| MGN Technology | 10178 |
| Micro Genius | 10150 |
| Midland | 10047, 10017, 10051, 10056 |
| Mintek | 11603, 11990 |
| Mitsubishi | 10154, 10093, 11250, 10150, 10178, 10030, 10836, 10868, 11392 |
| Monivision | 10700, 10843 |
| Motorola | 10054, 10051, 10093, 10150 |
| MTC | 10180, 10060, 10030, 10092, 10056 |
| Multitech | 10180 |
| NAD | 10156, 10178, 10166, 10056, 10866, 11156 |
| NEC | 10047, 10178, 10030, 10056, 10497, 10704, 10882, 11398, 11704 |
| NetTV | 10762, 11755 |
| New Tech | 10056 |
| Nikko | 10178, 10030, 10092 |
| Nikkodo | 10178, 10030, 10092 |
| Nishi | 10030 |
| Norcent | 10748, 10824, 11365 |
| Norwood Micro | 11286 |
| NTC | 10092 |
| Nyon | 10000 |
| Olevia | 11144, 11240, 11331, 11610 |
| Onwa | 10180 |
| Optimus | 10154, 10250, 10093, 10180, 10150, 10178, 10030, 10166, 10056, 10650 |
| Optoma | 11348 |
| Optonica | 10093 |
| Orion | 10017, 10236, 10463, 10180, 10178, 11463, 10177 |
| Pace | 10092 |
| Panasonic | 10054, 10000, 10156, 10250, 10051, 10236, 10030, 10650, 11291, 11310, 11410, 11480, 11941 |
| Panda | 10706 |
| Paxonic | 10060, 10030 |
| PCE | 10156, 10060 |
| Penney | 10047, 10000, 10156, 10250, 10051, 10060, 10178, 10030, 10056, 11347 |
| Petters | 11523 |
| Philco | 10054, 10463, 10030, 10145 |
| Philips | 11454, 10054, 10030, 10171, 10056, 10690, 11154, 11254, 11744, 11867 |
| Pilot | 10051, 10060, 10178, 10030, 10056 |
| Pioneer | 10166, 10679, 10866, 11260, 11398, 11457 |
| Planar | 11496 |
| Polaroid | 10765, 10865, 11276, 11314, 11326, 11328, 11341, 11523, 11766, 12002 |
| Portland | 10451, 10092 |
| Precision | 10236, 10180, 10177 |

| | |
|---|---|
| Prima | 10761, 10783, 10815, 10817, 11785 |
| Princeton | 10700, 10717 |
| Prism | 10250, 10051 |
| Proscan | 11447, 10047, 10466, 11347 |
| Proton | 10178, 10466 |
| Pulsar | 10017, 10092 |
| Pulser | 10178, 10092 |
| Quartz | 10150, 10178 |
| Quasar | 10250, 10051, 10650 |
| Rabbit | 10047 |
| RadioShack | 10047, 10154, 10180, 10150, 10178, 10030, 10056 |
| RCA | 11447, 10047, 10054, 10000, 10051, 10093, 10178, 12002, 11958, 11781, 11547, 11347, 11247, 11147, 11047, 10774, 10679, 10090 |
| Realistic | 10047, 10154, 10180, 10150, 10178, 10030, 10056 |
| RevolutionHD | 11623 |
| Runco | 10017, 10060, 10030, 10497, 10603, 11292, 11398, 11629 |
| Sampo | 10047, 10030, 11756, 10762, 11755 |
| Samsung | 10047, 10054, 10017, 10154, 10060, 10812, 10702, 10178, 10030, 10056, 10587, 10766, 10814, 11060, 11575 |
| Sanky | 10060, 10030 |
| Sansui | 10463, 10060, 10030, 11409, 11935 |
| Sanyo | 10047, 10054, 10154, 10000, 10463, 10171, 10088, 10799, 10893, 11142, 11755 |
| Saville | 10060 |
| Sceptre | 10878, 11217, 11360, 11599 |
| Scotch | 10178 |
| Scott | 10236, 10180, 10178, 10030, 10177, 11711 |
| Sears | 10047, 10054, 10017, 10154, 10000, 10156, 10051, 10093, 10060, 10053, 10178, 10030, 10171, 10166, 10056 |
| Seleco | 11351 |
| Sharp | 10054, 10093, 10180, 10491, 10688, 10689, 10818, 10851, 11602 |
| Sheng Chia | 10093 |
| Shivaki | 10178 |
| Siemens | 10145 |
| Signature | 10047, 10093, 10030 |
| Simpson | 10178, 10030 |
| Singer | 10060, 10092 |
| Solar Drape | 10000 |
| Sole | 10813, 11623 |
| Sony | 10017, 10154, 11100, 10000, 10150, 10053, 10834, 11685 |
| Soundesign | 10180, 10178, 10056 |
| Sova | 11952 |
| Soyo | 11520, 11826 |
| Spectravision | 10156, 10178 |
| Squareview | 10171 |
| SR2000 | 10154, 10171 |
| SSS | 10180 |
| Starlite | 10236, 10180 |
| Studio Experience | 10843 |
| Superscan | 10093, 10864 |
| Supreme | 10000 |
| SV2000 | 10054 |
| SVA | 10748, 10587, 10865, 10870, 10871, 10872 |

| | |
|---|---|
| Sylvania | 10047, 10054, 10154, 10000, 10051, 10178, 10030, 10171, 10092, 10056, 11271, 11314, 11394, 11864, 11963 |
| Symphonic | 10000, 10180, 10178, 10171 |
| Syntax | 11144, 11240, 11331, 11610 |
| Tandy | 10093 |
| Tatung | 10000, 10051, 11756, 11286 |
| Teac | 10154, 10706, 10689 |
| Technics | 10054, 10250, 10051 |
| Technovox | 10030 |
| Techview | 10847, 12004 |
| Techwood | 10250, 10051, 10060, 10056 |
| Teco | 11040 |
| Teknika | 10054, 10463, 10180, 10150, 10060, 10178, 10092, 10056 |
| Telecolor | 10017 |
| Telefunken | 10702, 10056 |
| Thomas | 10047, 10178, 10056 |
| Thomson | 11447, 10047 |
| TMK | 10236, 10180, 10178, 10056, 10177 |
| TNCi | 10017 |
| Tocom | 10156 |
| Toshiba | 10154, 11256, 10156, 10150, 11265, 10060, 11145, 10145, 10166, 12006, 11935, 11704, 11656, 11635, 11524, 11356, 11164, 11156, 10845, 10832, 10822, 10650 |
| Totevision | 10051 |
| Toyomenka | 10178 |
| Truetone | 10250, 10051 |
| TruTech | 11723 |
| TVS | 10463 |
| Ultra | 10092 |
| Universal | 10047 |
| Universum | 10177 |
| US Logic | 11286 |
| V | 11756, 10864, 10885, 11755 |
| Vector Research | 10030 |
| Victor | 10053 |
| Vidikron | 10054, 11292, 11398, 11629 |
| Vidtech | 10178 |
| Viewsonic | 10857, 10864, 10885, 11330, 11578, 11627, 11640, 11755, 12014 |
| Viking | 10060 |
| Viore | 11684 |
| Vizio | 11756, 11758, 10864, 10885, 11755 |
| Wards | 10047, 10054, 10017, 10154, 10000, 10051, 10093, 10236, 10178, 10030, 10166, 10056, 10866, 11156 |
| Waycon | 10156 |
| Welton | 10178 |
| Westinghouse | 10000, 10451, 10885, 10889, 10890, 11282, 11577, 11712 |
| White Westinghouse | 10451, 10236, 10463, 10623, 10889 |
| World | 10451, 10236, 10463, 10180 |
| Wyse | 11365 |
| XR-1000 | 10154, 10180, 10171 |
| Yamaha | 10030, 10769, 10833, 10839, 11526 |
| Yorx | 10030 |
| Zenith | 10047, 10017, 10000, 10093, 10463, 11265, 10812, 10178, 10030, 11145, 10145, 10171, 10092 |

### *TV/DVD combination controlled by the DVD*

| | |
|---|---|
| Advent | 21016 |
| Akai | 20695 |
| Apex Digital | 20830 |
| Audiovox | 21071, 21121, 21122 |
| Axion | 21071 |
| Broksonic | 20695 |
| Citizen | 20695 |
| Emerson | 20675, 21268 |
| ESA | 21268 |
| Funai | 21268 |
| Go Vision | 21071 |
| Hitachi | 21247 |
| Insignia | 21268 |
| Jensen | 21016 |
| Magnavox | 21268 |
| Panasonic | 21490 |
| Philips | 20854, 21260 |
| Prima | 21016 |
| RCA | 21022 |
| Samsung | 20899 |
| Sansui | 20695 |
| Sova | 21122 |
| Sylvania | 20675, 21268 |
| Toshiba | 20695 |

### *TV/DVD combination controlled by the TV*

| | |
|---|---|
| Accurian | 11803 |
| Akai | 11675, 11935 |
| Audiovox | 11937, 11951, 11952 |
| Axion | 11937 |
| Broksonic | 11935 |
| Citizen | 11935 |
| Dynex | 11810 |
| Emerson | 11394, 11963 |
| ESA | 11963 |
| Funai | 11963 |
| iLo | 11990 |
| Initial | 11990 |
| Insignia | 11963, 12002 |
| LG | 11993 |
| Magnavox | 11866, 11963, 11990 |
| Maxent | 11714 |
| Mintek | 11990 |
| Panasonic | 11941 |
| Polaroid | 11523, 11766, 12002 |
| RCA | 11958, 12002 |
| Sansui | 11935 |
| Sova | 11952 |
| Sylvania | 11394, 11864, 11963 |
| Techview | 12004 |
| Toshiba | 11524, 11635, 11935, 12006 |

### *TV/VCR combination controlled by the TV*

| | |
|---|---|
| America Action | 10180 |
| Audiovox | 10180 |
| Emerson | 10236 |

### *TV/VCR combination controlled by the VCR*

| | |
|---|---|
| Broksonic | 20479, 21479 |
| Citizen | 21278 |
| Curtis Mathes | 21035 |
| Daewoo | 21278 |
| Emerson | 20479, 20593, 21278, 21479 |
| Funai | 20000 |
| GE | 20807, 21035, 21060 |
| GoldStar | 21237 |
| Harley Davidson | 20000 |
| Hitachi | 20000 |
| LG | 21037 |
| Lloyd's | 20000 |
| Magnasonic | 20593, 21278 |
| Magnavox | 20000, 20593, 21781 |
| Memorex | 20162, 21037, 21162, 21237, 21262 |
| Mitsubishi | 20807 |
| Optimus | 20162, 20593, 21162, 21262 |
| Orion | 20479, 21479 |
| Panasonic | 20162, 21035, 21162, 21262 |
| Penney | 21035, 21237 |
| Quasar | 20162, 21035, 21162 |
| RadioShack | 20000, 21037 |
| RCA | 20807, 21035, 21060 |
| Samsung | 21014 |
| Sansui | 20000, 20479, 21479 |
| Sears | 20000, 21237 |
| Sony | 20000, 21232 |
| Sylvania | 21781 |
| Symphonic | 20000, 20593 |
| Thomas | 20000 |
| Toshiba | 20845, 21145 |
| Zenith | 20000, 20479, 21479 |

### *TV/VCR/DVD combination controlled by the DVD*

| | |
|---|---|
| Akai | 20899 |
| Broksonic | 20868 |
| Emerson | 20821 |
| ESA | 20821 |
| Funai | 21334 |
| Magnavox | 20821 |
| Panasonic | 21362, 21462 |
| RCA | 21132 |
| Sharp | 20630 |
| Superscan | 20821 |
| Sylvania | 20821 |
| Symphonic | 20821 |
| Toshiba | 21045 |

### *TV/VCR/DVD combination controlled by the VCR*

| | |
|---|---|
| Sharp | 20807 |

### *VCRs*

| | |
|---|---|
| A-Mark | 20037, 20000, 20046 |
| ABS | 21972 |
| Accurian | 20000 |
| Admiral | 20060, 20048, 20039, 20209, 20479 |
| Adventura | 20037, 20000 |
| Aiwa | 20037, 20000 |
| Alba | 20209 |
| Alienware | 21972 |
| Allegro | 20039 |
| American High | 20035, 20081 |
| Amstrad | 20000 |
| Astra | 20035 |
| Audiovox | 20037, 20038 |
| Avis | 20000 |
| Bell & Howell | 20035, 20048, 20039, 20000, 20046, 20479 |
| Broksonic | 20184, 20121, 20209, 20479, 21479 |
| Calix | 20037 |
| Candle | 20037, 20038 |
| Canon | 20035 |
| Carver | 20035, 20081 |
| Citizen | 20035, 20037, 20000, 20209, 20479, 21278 |
| Classic | 20037 |
| Colortyme | 20060, 20035, 20045 |
| Colt | 20000 |
| Craig | 20037 |
| Criterion | 20000 |
| Crosley | 20035, 20081, 20000, 20149 |
| Curtis Mathes | 20060, 20035, 20162, 20000, 21035 |
| CyberPower | 21972 |
| Daewoo | 20037, 20045, 20046, 21278 |
| Daytron | 20037 |
| Dell | 21972 |
| Denon | 20081, 20042 |
| DirecTV | 20739 |
| Dual | 20000 |
| Durabrand | 20039, 20038 |
| Dynatech | 20000 |
| Electrohome | 20060, 20037, 20000, 20043, 20209 |
| Electrophonic | 20037 |
| Emerald | 20184, 20121 |
| Emerex | 20032 |
| Emerson | 20037, 20184, 20000, 20121, 20043, 20209, 20479, 20593, 21278, 21479, 21593 |
| Fisher | 20039, 20000, 20046 |
| Fuji | 20035, 20033 |
| Fujitsu | 20000 |
| Funai | 20037, 20000, 20593, 21593 |
| Garrard | 20000 |
| Gateway | 21972 |
| GE | 20060, 20035, 20048, 20000, 20149, 20807, 21035, 21060 |
| Gemini | 20060 |
| Genexxa | 20037, 20000 |
| Go Video | 20614 |
| GoldStar | 20035, 20037, 20039, 20000, 20038, 21237 |
| Goodmans | 20037, 20081, 20000 |
| Gradiente | 20000 |
| Granada | 20081, 20042 |
| Grundig | 20081 |
| Harley Davidson | 20000 |
| Harman/Kardon | 20081, 20038 |
| Headquarter | 20046 |
| Hewlett Packard | 21972 |
| HI-Q 20035, | 20000 |
| Hitachi | 20035, 20037, 20045, 20000, 20042, 20089 |
| Howard Computers | 21972 |
| HP | 21972 |
| Hughes Network Systems | 20042, 20739 |
| Humax | 20739 |
| Hush | 21972 |
| Hytek | 20000 |
| iBUYPOWER | 21972 |
| Instant Replay | 20035 |
| Jensen | 20067 |
| JVC | 20067, 21162 |
| KEC | 20037 |
| Kenwood | 20067, 20038, 20046 |
| Kodak | 20035, 20037 |
| KTV | 20000 |
| LG | 20037, 20038, 21037 |
| Linksys | 21972 |
| Lloyd's | 20000, 20038 |
| Loewe | 20081 |
| Logik | 20000 |
| Luxor | 20046 |
| LXI | 20037, 20000, 20042, 20067 |
| Magnasonic | 20037, 20000, 20593, 21278 |
| Magnavox | 20035, 20037, 20048, 20039, 20081, 20000, 20149, 20563, 20593, 20618, 21593, 21781 |
| Marantz | 20035, 20081, 20038 |
| Marta | 20037 |
| Matsui | 20037, 20209 |
| Matsushita | 20035, 20162, 20081, 21162 |
| Media Center PC | 21972 |
| MEI | 20035 |
| Memorex | 20035, 20162, 20037, 20048, 20039, 20000, 20209, 20046, 20479, 21037, 21162, 21237, 21262 |
| Metz | 20037 |
| MGA | 20060, 20043 |
| Microsoft | 21972 |
| Mind | 21972 |
| Minolta | 20042 |
| Mitsubishi | 20060, 20048, 20000, 20042, 20067, 20043, 20807 |
| Motorola | 20035, 20048 |
| MTC | 20000 |
| MTX | 20000 |
| Multitech | 20039, 20000 |
| NEC | 20067, 20038 |
| Nikko | 20037 |
| Nikkodo | 20037 |
| Niveus Media | 21972 |
| Northgate | 21972 |
| Olympus | 20035, 20162 |

| | |
|---|---|
| Optimus | 21062, 20035, 20162, 20037, 20048, 20000, 20593, 21162, 21262 |
| Orion | 20184, 20000, 20121, 20209, 20479, 21479 |
| Panama | 20035 |
| Panasonic | 21062, 20035, 20162, 20000, 20225, 20614, 20616, 21035, 21162, 21262 Penney 20035, 20162, 20037, 20081, 20000, 20042, 20067, 20038, 21035, 21237 |
| Pentax | 20042 |
| Philco | 20035, 20081, 20000, 20209, 20479 |
| Philips | 20035, 20162, 20048, 20081, 20045, 20000, 20209, 20616, 20618, 20739, 21081, 21181 |
| Pilot | 20037 |
| Pioneer | 20162, 20081, 20042, 20067 |
| Polk Audio | 20081 |
| Presidian | 21593 |
| Proscan | 20060, 21060 |
| Protec | 20000 |
| Pulsar | 20039 |
| Quarter | 20046 |
| Quartz | 20035, 20046 |
| Quasar | 20035, 20162, 21035, 21162 |
| RadioShack | 20035, 20162, 20037, 20048, 20000, 20046, 21037, 21162 |
| Radix | 20037 |
| Randex | 20037 |
| RCA | 20060, 20035, 20048, 20045, 20000, 20042, 20149, 20807, 20880, 21035, 21060 |
| Realistic | 20035, 20162, 20037, 20048, 20000, 20121, 20046, 21162 |
| ReplayTV | 20614, 20616 |
| Ricavision | 21972 |
| Runco | 20039 |
| Samsung | 20060, 20045, 20000, 20038, 20739, 21014 |
| Sanky | 20048, 20039 |
| Sansui | 20000, 20067, 20209, 20479, 21479 |
| Sanyo | 20000, 20046, 20479 |
| Scott | 20184, 20045, 20121, 20043 |
| Sears | 20060, 20035, 20162, 20037, 20048, 20039, 20033, 20045, 20000, 20042, 20067, 20043, 20209, 20046, 21237 |
| Sharp | 20048, 20032, 20000, 20807, 20848 |
| Shintom | 20039, 20000 |
| Siemens | 20037 |
| Signature | 20060, 20035, 20037, 20048, 20000, 20149, 20046, 20479 |
| Singer | 20037 |
| Sonic Blue | 20614, 20616 |
| Sonographe | 20046 |
| Sony | 20035, 20032, 20033, 20000, 20067, 20046, 20636, 21032, 21232, 21972 |
| Soundmaster | 20000 |
| Stack 9 | 21972 |
| STS | 20042 |
| SV2000 | 20000 |
| SVA | 20000 |
| Sylvania | 20035, 20081, 20000, 20043, 20593, 21593, 21781 |
| Symphonic | 20000, 20593, 21593 |
| Systemax | 21972 |
| Tagar Systems | 21972 |
| Tandy | 20000 |
| Tashiko | 20037 |
| Tatung | 20048, 20081, 20000, 20067 |
| Teac | 20000, 20067 |
| Technics | 20035, 20162, 20037, 20000 |
| Teknika | 20035, 20037, 20000 |
| Tevion | 20479 |
| Thomas | 20000 |
| Thomson | 20060 |
| Tivo | 20618, 20636, 20739, 21996 |
| TMK | 20000 |
| TNIX | 20037 |
| Toshiba | 20045, 20000, 20043, 20209, 20845, 21008, 21145, 21972, 21996 |
| Totevision | 20037 |
| Touch | 21972 |
| Trix | 20037 |
| Ultra | 20045 |
| Vector | 20045 |
| Vector Research | 20184, 20038 |
| Victor | 20067 |
| Video Concepts | 20045 |
| Videomagic | 20037 |
| Videosonic | 20000 |
| Viewsonic | 21972 |
| Villain | 20000 |
| Voodoo | 21972 |
| Wards | 20060, 20035, 20037, 20048, 20081, 20033, 20045, 20000, 20042, 20043, 20038, 20149, 20046, 20479 |
| Wharfedale | 20593 |
| White Westinghouse | 20000, 20209, 20479 |
| World | 20209, 20479 |
| XR-1000 | 20035, 20000 |
| Yamaha | 20038 |
| Zenith | 20037, 20039, 20033, 20000, 20209, 20479, 21479 |
| ZT Group | 21972 |

### *Video Accessories*

| | |
|---|---|
| 2Wire | 02045 |
| ABS | 01272 |
| Access HD | 02185 |
| Accurian | 01653 |
| Alienware | 01272 |
| Amino | 01481 |
| AT&T | 00858, 02045 |
| Buffalo | 01739 |
| CASTi | 02305 |
| CyberPower | 01272 |
| D-Link | 01554, 01731, 02186 |
| Digital Stream | 02303 |
| Epson | 01563 |
| Gateway | 01272 |
| Hewlett Packard | 01272, 01267 |
| Howard Computers | 01272 |
| HP | 01272, 01267 |
| Hush | 01272 |

| | |
|---|---|
| iBUYPOWER | 01272 |
| Insignia | 01415 |
| KoolConnect | 01481 |
| LG | 01415 |
| Linksys | 01272, 01365 |
| Media | Center PC 01272 |
| Microsoft | 01272, 02049 |
| Mind | 01272 |
| Motorola | 00858, 01363, 01998 |
| Netgear | 02036 |
| Niveus Media | 01272 |
| Northgate | 01272 |
| Panasonic | 01120 |
| Pioneer | 01010 |
| Ricavision | 01272 |
| Roku | 01486 |
| Samsung | 01190, 01490 |
| Scientific Atlanta | 00858 |
| Sensory Science | 01126 |
| Sharp | 01010 |
| SMC | 01456 |
| Sony | 01272, 01324, 01364 |
| Stack 9 | 01272 |
| SureWest | 01481 |
| Sylvania | 01563 |
| Systemax | 01272 |
| Tagar Systems | 01272 |
| Toshiba | 01272 |
| Touch | 01272 |
| Viewsonic | 01272, 01329 |
| Vizio | 01126 |
| Voodoo | 01272 |
| VUDU | 02298 |
| Xbox | 02049 |
| Zenith | 01415 |
| ZT Group | 01272 |

# Maintaining

- Do not use your TV in areas that are too hot or too cold, because the cabinet may warp or the screen may malfunction. Your TV works best in temperatures that are comfortable to you.
- Storage temperatures are 32° to 122°F (0° to 50°C).
- Working temperatures are 41° to 104°F (5° to 40°C).
- Do not place your TV in direct sunlight or near a heat source.

## Cleaning the TV cabinet

Clean the cabinet with a soft, lint-free cloth. **Do not** use the cleaning cloth that came with your TV to clean the cabinet. If the cabinet is especially dirty, moisten a soft, lint-free cloth in a weak detergent solution, squeeze the excess moisture from the cloth, then wipe the screen or cabinet with the cloth. Use a clean cloth to dry the screen or cabinet.

## Cleaning the TV screen

Clean the screen with the cleaning cloth or a soft, lint-free cloth. **Do not** use the cleaning cloth to clean other parts of your TV.

# Troubleshooting

**Warning**

Do not try to repair your TV yourself. Refer all service to a qualified service technician.

| Problem | Solution |
|---|---|
| No power | • Make sure that the power cord is correctly connected to your TV and a power outlet.<br>• Unplug the power cord, wait 60 seconds, then plug the cord back in and turn on your TV. |
| No picture | • Make sure that **Audio Only** option is set to **Off**. For more information, see “Playing TV audio only” on page 17.<br>• Make sure that the video cables are connected securely to the back of your TV.<br>• Adjust the contrast and brightness.<br>• Make sure that the correct video mode is selected.<br>• Make sure that the incoming signal is compatible.<br>• Make sure the antenna is connected correctly.<br>• Check the closed caption settings. Some TEXT modes can block the screen. |
| Good picture but no sound | • Increase the volume.<br>• Make sure that the sound is not muted.<br>• Make sure that the correct audio mode is selected. |
| Good sound but poor color | • Adjust the contrast, color, and brightness settings. |
| Poor picture | • Make sure that the room is not too bright. Light reflecting off the screen can make the picture difficult to see.<br>• If an S-VHS camera or a camcorder is connected while another connected device is turned on, the picture may be poor. Turn off one or more devices. |
| Horizontal dotted line | • Your TV may be too close to another electrical device, such as a hair dryer or neon light. Turn off the device or move your TV. |
| “Ghost” or double image | • This may be caused by obstructions to the antenna, such as high-rise buildings or hills. Use of a highly directional antenna may improve the picture quality. |

| Problem | Solution |
|---|---|
| Remote control does not work | • Press TV (not the color button)<br>• Replace the batteries. Make sure that the + and – symbols on the batteries align with the + and – symbols in the battery compartment.<br>• Clean the remote sensor on the front of your TV.<br>• Bright or fluorescent lighting may interfere with the remote control signal. Turn off the light or move your TV. |
| Snowy picture or noise | • Make sure that the A/V and antenna cables are connected correctly and securely. |
| VGA picture is not stable or synchronized | • Make sure that you have selected the correct VGA mode on your computer. |
| No output from one of the speakers | • Adjust the balance in the *Audio* menu. |
| Control buttons do not work | • Make sure that the **Button Lock** option is set to Off. For more information, see "Locking control buttons" on page 24.<br>• Unplug the power cord, wait a few seconds, then plug the cord back in and turn on your TV. |
| After images appear | • Do not display a still image, such as a logo, game, or computer image, for an extended period of time. This can cause a permanent after-image to be burned into the screen. This type of damage is not covered by your warranty. |
| Picture has a few bright or dark dots | • A few bright or dark dots on an LCD screen is normal. It does not affect the operation of this TV. |

# Specifications

Design and specifications are subject to change without notice.

| | |
|---|---|
| Analog standard | NTSC |
| Digital standard | ATSC, 8-VSB, Clear-QAM |
| Screen | 32" |
| Channel coverage | VHF: 2-13<br>UHF: 14-69<br>CATV: Mid band - A-8 ~ A-1, A ~ I<br>Super band - J ~ W<br>Hyper band - AA ~ ZZ, AAA, BBB<br>Ultra band - 65 ~ 94, 100 ~ 135 |
| Power source | AC 120 V ~ 60 Hz |
| Power consumption | 150 W with TV on<br><1 W in standby mode |
| Audio power | 10 W + 10 W internal speaker |
| S-Video input | Y: 1 V (p-p), 75 ohm, negative sync<br>C: 0.286 V (p-p) (burst signal), 75 ohm |
| Video/audio input (2) | Video: 1 V (p-p), 75 ohm, negative sync<br>Audio: 300 mV (rms) |
| Component input (2) | Y: 1 V (p-p), 75 ohm, including sync<br>Pr/Cr: ±0.35 V (p-p), 75 ohm<br>Pb/Cb: ±0.35 V (p-p), 75 ohm<br>Audio: 300 mV (rms)<br>Suggested resolutions: 1080i, 720p, 480p, 480i |
| HDMI input (4) | 4 HDMI input jacks<br>HDCP compliant<br>E-EDID compliant<br>Suggested scan rates: 1080i, 720p, 480p, 480i |
| VGA input | E-EDID compliant<br>Suggested scan rates: 640×480 /60 Hz, 800×600 /60 Hz, 1024×768 /60 Hz, 1360×768 /60 Hz<br>Audio input: Headphone mini-jack for stereo |
| Accessories | Remote control and batteries (2 AA)<br>Remote control holder<br>AC power cord<br>Component cable<br>Cleaning cloth<br>User guide<br>Quick Setup Guide |

# Legal notices

### *FCC Part 15*

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

### *FCC warning*

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

### *Cables*

Connections to this device must be made with shielded cables with metallic RF/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

### *Canadian notice*

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

"Standard Television Receiving Apparatus-Appareil de reception télévision ordinaire, Canada BETS-7 / NTMR-7".

### *Dolby License Notice and Trademark Acknoledgement*

DOLBY DIGITAL

Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

***HDMI***

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

***Audyssey Dynamic Volume™***

# Two-year limited warranty

Insignia Products ("Insignia") warrants to you, the original purchaser of this new **NS-L32Q-10A** ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of two (2) years from the date of your purchase of the Product ("Warranty Period"). This Product must be purchased from an authorized dealer of Insignia brand products and packaged with this warranty statement. This warranty does not cover refurbished Product. If you notify Insignia during the Warranty Period of a defect covered by this warranty that requires service, terms of this warranty apply.

### *How long does the coverage last?*

The Warranty Period lasts for 2 years (730 days) from the date you purchased the Product. The purchase date is printed on the receipt you received with the Product.

### *What does this warranty cover?*

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

### *How to obtain warranty service?*

If you purchased the Product at a retail store location, take your original receipt and the Product to the store you purchased it from. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from an online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain in-home warranty service for a television with a screen 30 inches or larger, call 1-888-BESTBUY. Call agents will diagnose and correct the issue over the phone or will have an Insignia-approved repair person dispatched to your home. Should the Insignia-approved repair person not correct the issue on the first call, an Insignia television (size and features to be determined by Insignia) will be loaned to you until your TV is repaired and returned, at no charge to you. This feature is only available to Insignia television consumers residing in the United States.

### *Where is the warranty valid?*

This warranty is valid only to the original purchaser of the product in the United States, Canada, and Mexico.

### *What does the warranty not cover?*

This warranty does not cover:

- Customer instruction
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as lightning strikes
- Accident
- Misuse
- Abuse
- Negligence
- Commercial use
- Modification of any part of the Product, including the antenna
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).

This warranty also does not cover:

- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage supply
- Attempted repair by anyone other than a facility authorized by Insignia to service the Product
- Products sold as is or with all faults
- Consumables, such as fuses or batteries
- Products where the factory applied serial number has been altered or removed

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289
www.insigniaproducts.com

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, Minnesota, U.S.A.
55423-3645

© 2009 Best Buy Enterprise Services, Inc.
All rights reserved. INSIGNIA is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

INSIGNIA™

www.insigniaproducts.com (877) 467-4289

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA 55423-3645
© 2009 Best Buy Enterprise Services, Inc.
All rights reserved. INSIGNIA is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries.
All other products and brand names are trademarks of their respective owners.

ENERGY STAR

ENGLISH
09-0659